### **Fuseholders**

### Special Types

## For ATO® Fuses In-Line Type

### **SPECIFICATIONS:**

**Electrical:** Intended for use with 32 volts Autofuse® fuses rated to 20 or 30 amperes depending on wire size and terminal combinations.

**Mounting:** Capable of snap-mounting to panel from rear. Fuseholders

interlock for multiple mounting.

**Molded Parts:** Black Thermoplastic (UL 94V2). **Terminals:** Brass. Tin-plated. Snap-lock into body. **Ambient Temperature:** –40°C to +85°C.

Wire: Stranded with PVC insulation, black #14 AWG for 155 300 Series


and orange #10 AWG for 155 400 Series.

#### **PATENTED**

### **ORDERING INFORMATION:**

Catalog Number			
Unassembled	Assembled with 8" Wire Loop, No Fuse	Assembled with 8" Wire Loop and Fuse	Fuse Amperage Rating
155 320U (Terminals designed for #14 AWG stranded wire and marked "14").	155 300 (#14 wire/ terminals rated to 20A).	155 303A 155 304A 155 305A 155 37.5A 155 310A 155 315A 155 320A	3 4 5 7.5 10 15 20
155 430U (Terminals designed for #10 AWG stranded wire and marked "10").	155 400 (#10 wire/ terminals rated to 30A).	<b>155</b> 425A <b>155</b> 430A	25 30



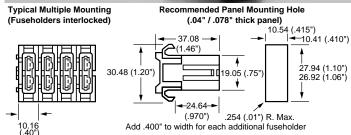

# For ATO® Fuses P.C. Board Mount Type


### **SPECIFICATIONS:**


Electrical: Intended for use with 32 volts ATO® fuses rated to 15

amperes.

Molded Parts: Black Thermoplastic Terminals: Copper Alloy, Tin Plated Ambient Temperature: -40°C to +85°C.

ORDERING INFORMATION: Catalog Number: 04450715

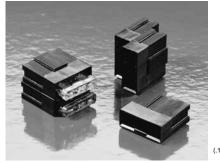

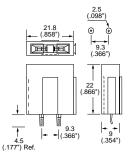

# For $\mathbf{MINI}^{\mathbb{B}}$ Fuses In-Line Type — Easy Crimp Fuseholder

### **SPECIFICATIONS:**

Terminals: Copper Alloy/Tin plated.

**Body:** Black Thermoplastic.


Operating Temperature: -40°C to +105°C.

Use standard crimping tool and crimp the matted area to secure wire. (Possible crimp tool - Ideal #30-428 [Toothed Die slot] or equivalent).

### ORDERING INFORMATION:

Catalog Number	Description		
<b>153</b> 002	20A Max. Rating — Terminals will accept #16–22 AWG (1.033 mm²) stranded wire (use appropriate wire size based on fuse usage). For example — Use #16 AWG wire for 20A fuse.		
<b>153</b> 003	30A Max. Rating — Terminals will accept #10–14 AWG (5.0-2.0 mm²) stranded wire (use appropriate wire size based on fuse usage). For example — Use #10 AWG wire for 30A fuse.		

**Tool** For Fuse Removal or Replacement; Part No. 097024.

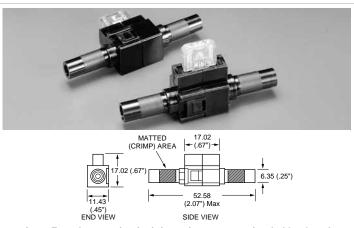

\* Please refer to Fuseology section for information on proper fuseholder de-rating.

13 ″

FUSEHOLDERS