

599 Menlo Drive, Suite 100 Rocklin, California 95765, USA **Office:** (916) 624-8333 **Fax:** (916) 624-8003 General: info@parallaxinc.com Technical: support@parallax.com Web Site: www.parallax.com Educational: http://www.parallax.com/html\_pages/edu/

# Standard Servo (#900-00005)

## **General Information**

The Parallax standard servo is ideal for robotics and basic movement projects. These servos will allow a movement range of 0 to 180 degrees. The Parallax servo output gear shaft is a standard Futaba configuration. The servo is manufactured by Futaba specifically for Parallax.



## **Technical Specifications**


> Power 6vdc max

> Speed 0 deg to 180 deg in 1.5 seconds on average

- > Weight 45.0 grams/1.59oz
- > Torque 3.40 kg-cm/47oz-in

> Size mm (L x W x H) 40.5x20.0x38.0


> Size in (L x W x H) 1.60x.79x1.50

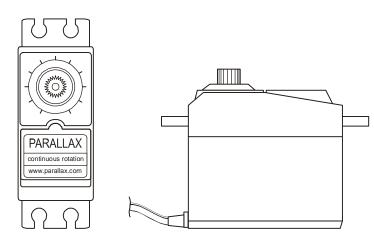

#### Motor Control from a BASIC Stamp

Parallax (www.parallax.com) publishes many circuits and examples to control servos. Most of these examples are available for download from our web site. On www.parallaxinc.com type in "servo" and you'll find example codes below.

## Wiring setup

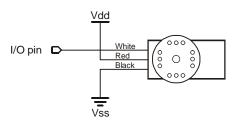

The servo is controlled by pulsing of it's signal line. If you are using an Basic Stamp this is done with the pulsout command. Below is stamp code that will help you with basic control of a servo. The codes below may not move the servos from on extreme to another but is will give you a general demonstration on function.

#### Stamp1 code

```
SYMBOL Servo_pin = 0 'I/O pin that is connected to servo
SYMBOL Temp = W0 'Work space for FOR NEXT
start:
FOR temp = 70 TO 250
PULSOUT Servo_pin,temp
PAUSE 50
NEXT
FOR temp = 250 TO 70
PULSOUT Servo_pin,temp
PAUSE 50
NEXT
GOTO start
```

#### 'Stamp 2 ,2e,2pe

Servo\_pin CON 0 'I/O pin that is connected to servo Temp 'Work space for FOR NEXT VAR Word start: FOR temp = 200 TO 1200 PULSOUT Servo\_pin,temp PAUSE 50 NEXT FOR temp = 1200 TO 200PULSOUT Servo\_pin,temp PAUSE 50 NEXT GOTO start

'Stamp 2sx,2p24/40

Servo\_pin CON 'I/O pin that is connected to servo 0 Temp VAR Word 'Work space for FOR NEXT start: FOR temp = 500 TO 3000PULSOUT Servo\_pin,temp PAUSE 20 NEXT FOR temp = 3000 TO 500PULSOUT Servo\_pin,temp PAUSE 20 NEXT GOTO start