# ST7MDT25-DVP3 Probe User Guide

Release 1.0

# August 2004



Ref: DOC-MDT0017



#### **INSTRUCTIONS FOR USE—WARNING**

This product is conform to the 89/336/EEC Directive. It complies with the ITE EN55022 (1998 edition) standard for EMC emissions and the 55024 (1998 edition) immunity standards.

This product is an FCC Class-A apparatus. In a residential environment, it may cause radioelectrical disturbances.

In addition, this development board is not contained in an outer casing; consequently, it cannot be immune against electostatic discharges (ESD). Please refer to *Appendix B EMC Conformity and Safety Requirements* on page 28 for relevant safety information.

#### USE IN LIFE SUPPORT DEVICES OR SYSTEMS MUST BE EXPRESSLY AUTHORIZED.

STMicroelectronics PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF STMicroelectronics. As used herein:

1. Life support devices or systems are those which (a) are intended for surgical implant into the body, or (b) support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided with the product, can be reasonably expected to result in significant injury to the user. 2. A critical component is any component of a life support device or system whose failure to perform can reasonably be expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

# Table of Contents

Chapter 1:	Introduction	2
1.1	About the user manuals	3
Chapter 2:	Delivery checklist	4
Chapter 3:	Connecting to your application board	8
3.1	TQFP64 (14 x 14) package	9
3.2	TQFP64 (10 x 10) package	11
3.3	TQFP44 (10 x 10) package	13
3.4	TQFP32 (7 x 7) package	15
3.5	Installing 50-pin connectors on your application board	18
Chapter 4:	Emulation characteristics	. 20
4.1	On-chip peripherals configuration	20
4.2	Emulation functional limitations and discrepancies	23
Chapter 5:	Programming with your ST7MDT25-DVP3	. 24
Appendix A:	Installing Connectors for the TQFP64/44 adapter	. 25
Appendix B:	EMC Conformity and Safety Requirements	. 28
Product Sup	port	. 29

57

57

#### 1 INTRODUCTION

57/

The **ST7-DVP3 series emulators** are the latest generation of low cost emulators for ST7. These emulators are based on a modular design so that they can be configured to emulate a specific MCU and package type.

ur emulator's **Main Emulation Board (MEB)** is common to all DVP3 series emulators. This board provides the connection to your host PC. For information about this connection and emulator features, refer to your *ST7-DVP3 Emulator User Manual*.

The **ST7MDT25-DVP3 probe**, consisting of the Target Emulation Board (TEB), Adapter Kit and flat cables (*Figure 1*), is what gives your emulator the versatility to emulate MCUs form different families, with different packages.

The **Target Emulation Board** contains target-emulating hardware that is specific to an ST7 MCU, or a family of MCUs. Your ST7MDT25-TEB/DVP emulates MCUs in the **ST72561** family.



Figure 1: ST7MDT25-DVP3 probe

**Flat cables** connect your TEB to your application board. However, connecting to your application board requires either the use the appropriate adapters and sockets provided in an Adapter Kit, or the installation of connectors on your application board, which allow the direct connection of the emulator's flat cables or the TQFP64/44 adapter.

Adapter Kits provide all the components you will need to adapt your flat cables to four different MCU packages: TQFP64 (14 x 14), TQFP64 (10 x 10), TQFP44 (10 x 10), TQFP32 (7 x 7). *Table 1* provides a list of components for each Adapter Kit. In general, Adapter Kits consist of (*Figure 1*):

- An **Adapter** that receives the flat cables from the TEB and provides a connection for the Device Adapter.
- A **Device Adapter** that adapts the connection to a socket that is specific to your MCU's package.
- A **Socket** that matches your MCUs package. It is soldered onto your application board in place of your MCU.

Thanks to the modularity of the ST7-DVP3 series emulators, the components of the ST7MDT25-DVP3 probe allow you to adapt any DVP3 Main Emulation Board to emulate the ST72561 family of MCUs.

#### 1.1 About the user manuals...

This manual will help you connect your ST7MDT25-DVP3 emulator to your application board in place of your ST7 microcontroller. Information is provided to help you connect using the adapters and sockets that you may have ordered, or via connectors that you install on your application board. You will also find information about the emulation characteristics of your ST7MDT25-DVP3 emulator.

For information about the software and additional hardware intended for use with your emulator, refer to the following documents that are included with it:

ST7 Visual Develop User Manual - build and debug your application software

ST7-DVP3 Emulator User Manual - set up instructions for your emulator

*ST75261 Datasheet* - includes debugging and programming information that is specific to your MCU

Because of the modularity of the DVP3 emulator, this guide is delivered with the following products:

- ST7MDT25-TEB/DVP
- ST7MDT25-DVP3 emulator



57/

#### 2 DELIVERY CHECKLIST

Due to the modular structure of the ST7-DVP3 series emulators, different ordering codes allow you to order only the components you need to emulate your chosen MCU. The ordering codes allow you to specify (*Figure 2*):

- Main Emulation Board plus Target Emulation Board and flat cables
- Target Emulation Board and flat cables only
- which Adapter Kit that you will need.



Figure 2: ST7MDT25-DVP3 ordering codes

When using the delivery check list, keep in mind that the components you receive depend on the ordering codes that you have specified. *Table 1* shows the components delivered for each ordering code and the supported MCU package. Standard components are illustrated in *Figure 3* and Adapter Kit contents are shown in *Figure 4*.

ST7MDT25-DVP3

Also includes Main Emulation Board, PC connection accessories, power supply and ICC cable (See ST7-DVP3

Ordering cod	es and includ	ded components					
Ordering code	MCU package	Includes					
	Emulator or Target Emulation Board						
		(a) One ST7MDT25-DVP3 Target Emulation Board					
		(b) Two 50-pin flat cables					

		User Manual).			
ST7MDT25-TEB/DVP		(a) One ST7MDT25-DVP3 Target Emulation Board			
		(b) Two 50-pin flat cables			
		Adapter Kit Contents			
		(c) TQFP64/44 adapter (ref.: DB612) <sup>1</sup>			
ST7MDT25-T64/DVP	TQFP64	(f) TQFP64 14x14 device adapter (ref.: DB543)			
	(14 X 14)	(g) TQFP64 socket and cover (not shown)			
		(refs. CAB 3303262 and CAB 3303307)			
	TQFP64 (10 x 10)	(c) TQFP64/44 adapter (ref.: DB612) <sup>1</sup>			
ST7MDT25-T6A/DVP		(d) TQFP64 10x10 device adapter (ref.: DB583)			
		(e) YAMAICHI TQFP64 10x10 socket with cover			
		(ret.: IC149-064-075-B5)			
		(c) TQFP64/44 adapter (ref.: DB612) <sup>1</sup>			
ST7MDT25-T44/DVP	TQFP44	(h) TQFP44 device adapter (ref.: DB613)			
	(10 x 10)	(i) YAMAICHI TQFP44 socket with cover			
		(ret.: 10149-044-052-S5)			
	TQFP32 <sup>2</sup>	(j) TQFP32 adapter (ref.: DB615)			
ST7MDT25-T32/DVP	(7x7) (I)	(k) TQFP32 device adapter (ref.: DB522)			
		(I) IRONWOOD TQFP32 socket (ref.: SK-UGA06/32A-01)			

#### Table 1: Ordering codes and included components

- 1. You can use the TQFP64/44 adapter to connect directly to your application, without using the other adapters and sockets provided in the Adapter Kits if you design your application with two 40-pin SAMTEC connectors. More information is provided in Appendix A: on page 25.
- 2. Replacing the ST7MDT25-DVP3 TQFP32 probe with your ST7 can be done using the IRON-WOOD clam shell socket (ref.: CA-QFE32SA-L-Z-T-02-D1442) not provided with the kit.

57

#### **Emulator/TEB components**



Figure 3: Emulator/TEB components

#### Adapter Kit components



Figure 4: Adapter Kit components

<u>/۲</u>

#### **3 CONNECTING TO YOUR APPLICATION BOARD**

In addition to providing the firmware to emulate your MCU, the ST7MDT25-DVP3 probe serves as the hardware interface between your host PC and your application board. To connect to your application board, you can use the **Adapter Kit** corresponding to your MCU's package, or you can install 50-pin connectors corresponding to the emulator's J1 and J2 connectors on your application board that will allow you to connect without using the device adapter and socket provided in an Adapter Kit.

This chapter provides information about connecting your emulator using:

- Section 3.1 the Adapter Kit for the TQFP64 (14 x 14) package
- Section 3.2 the Adapter Kit for the TQFP64 (10 x 10) package
- Section 3.3 the Adapter Kit for the TQFP44 (10 x 10) package
- Section 3.4 the Adapter Kit for the TQFP32 (7 x 7) package
- Section 3.5 two 50-pin connectors to receive the flat cables

#### 3.1 TQFP64 (14 x 14) package

This procedure tells you how to connect the ST7MDT25-DVP3 to your application board when your target ST7 microcontroller is in the TQFP64 (14 x 14) package. This requires the ST7MDT25-T64/DVP Adapter Kit.

1 Solder the TQFP64 (14 x 14) socket on to your application board in place of your MCU. Keep in mind, when designing your application board you should ensure that there will be enough room to accommodate the device adapter (Ref.: DB543), which will connect to the socket in place of your MCU (see *Figure 5*).



Figure 5: Device adapter critical dimensions

- 2 Align the pin 1 of the device adapter (Ref.: DB543) with pin 1 of the socket, then secure the device adapter to the socket with the provided screws as shown in *Figure 6*.
- **3** With the emulator and the application board powered off, connect the 50-pin flat cables to the J1 and J2 connectors on the TEB.



57/

4 Connect the other ends of the flat cables to the J1 and J2 connectors on the TQFP64/44 adapter (Ref.: DB612). The orientation guides allow only one connection configuration.



Figure 6: Connection for TQFP64 (14 x 14) package

**5** Plug the TQFP64/44 adapter's W1 and W2 connectors into the corresponding W1 and W2 connectors on the device adapter.

#### 3.2 TQFP64 (10 x 10) package

This procedure tells you how to connect the ST7MDT25-DVP3 to your application board when your target ST7 microcontroller is in the TQFP64 (10x10) package. This requires the ST7MDT25-T6A/DVP Adapter Kit.

1 Solder the TQFP64 (10 x 10) socket on to your application board. Keep in mind, when designing your application board you should ensure that there will be enough room to accommodate the device adapter (Ref.: DB583), which will connect to the socket in place of your MCU (see *Figure 7*).



Figure 7: Device adapter critical dimensions

- 2 Align the pin 1 of the device adapter (Ref.: DB583) with pin 1 of the socket, then secure the device adapter to the socket with the provided screws as shown in *Figure 8*.
- **3** With the emulator and the application board powered off, connect the 50-pin flat cables to the J1 and J2 connectors on the TEB.



57/

4 Connect the other ends of the flat cables to the J1 and J2 connectors on the TQFP64/44 adapter (Ref.: DB612). The orientation guides allow only one connection configuration.



Figure 8: Connection for TQFP64 (10x10) package

**5** Plug the TQFP64/44 adapter's W1 and W2 connectors into the corresponding W1 and W2 connectors on the device adapter.

#### 3.3 TQFP44 (10 x 10) package

This procedure tells you how to connect the ST7MDT25-DVP3 to your application board when your target ST7 microcontroller is in the TQFP44 (10 x 10) package. This requires the ST7MDT25-T44/DVP Adapter Kit.

1 Solder the TQFP44 (10 x 10) socket on to your application board. Keep in mind, when designing your application board you should ensure that there will be enough room to accommodate the device adapter (Ref.: DB613), which will connect to the socket in place of your MCU (see *Figure 9*).



Figure 9: Device adapter critical dimensions

- 2 Align the pin 1 of the device adapter (Ref.: DB613) with pin 1 of the socket, then secure the device adapter to the socket with the provided screws as shown in *Figure 10*.
- **3** With the emulator and the application board powered off, connect the 50-pin flat cables to the J1 and J2 connectors on the TEB.

57/

4 Connect the other ends of the flat cables to the J1 and J2 connectors on the TQFP64/44 adapter (Ref.: DB612). The orientation guides allow only one connection configuration.



Figure 10: Connection for TQFP44 (10 x 10) package

5 Plug the TQFP64/44 adapter's W1 and W2 connectors into the corresponding W1 and W2 connectors on the device adapter.

#### 3.4 TQFP32 (7 x 7) package

This procedure tells you how to connect the ST7MDT25-DVP3 to your application board when your target ST7 microcontroller is in the TQFP32 package. This requires the ST7MDT25-T32/DVP Adapter Kit.

Because of the small size of the TQFP32 socket, a specific flex cable has been designed in order to minimize the mechanical stress applied to the socket adapter.

1 Solder the TQFP32 socket (Ironwood SK-UGA06/32A-01) onto your application board. Keep in mind, when designing your application board you should ensure that there will be enough room to accommodate the device adapter (Ref.: DB522), which will connect to the socket in place of your MCU (see *Figure 11*).



Figure 11: Device adapter critical dimensions

- Note: The socket provided in the Adapter Kit does not allow the replacement of the socket with a microcontroller, without unsoldering and removing the socket from the application board. Using an IRONWOOD clam shell socket (ref.: CA-QFE32SA-L-Z-T-02-D1442), facilitates the replacement of the flex connector with an actual MCU, however this socket is not provided in the Adapter Kit.
  - 2 With the emulator and the application board powered off, connect the TQFP32 device adapter (ref.: DB522) to the TQFP32 adapter (ref.: DB615), as shown in *Figure 12*.

<u>/</u>ک



Figure 12: Flex PCB mounted on TEB adapter

**3** Connect the TQFP32 adapter to the TEB's J1 and J2 connectors, as shown in *Figure 13*.



Figure 13: DVP3 configuration for TQFP32 emulation

4 Connect the TQFP32 device adapter to the soldered TQFP32 socket, ensuring that pin 1 of the device adapter is aligned with pin 1 of the socket. Pin 1 is identified by a white triangle.



Figure 14: TQFP32 connector



#### 3.5 Installing 50-pin connectors on your application board

Installing two male, 50-pin, HE-10 type connectors on your application board that correspond to the **J1** and **J2** connectors of your emulator, will allow you to plug the emulator flat cables directly into your application board. The following tables show the pin specification for J1 (*Table 2*) and J2 (*Table 3*) for each MCU package.

Pin N°	TQFP64	TQFP44	TQFP32	Description/ Comments		Pin N°	TQFP64	TQFP44	TQFP32	Description/ Comments	
1	23	14	11	PB6		2	2	2	2	OSC2	
3	22	13	10	PB5		4			27 and 28		
5	21	-	-	PE3		6					
7	20	-	-	PE2		8	8, 24,	15, 37			
9	19	12	9	PB4		10	40, 55 and 56	and 38		GND	
11	18	-	-	PE1		12					
13	17	-	-	PE0		14	-				
15	16	11	8	PB3		16	-				
17	15	10	7	PB2		18				reserved	
19	14	9	6	PB1		20					
21	13	-	-	PB0		22	-	15, 37 and 38	27 and 28		
23	12	-	-	PA7		24	8, 24,				
25	11	8	-	PA6		26	40, 55 and 56			28	GND
27	10	7	5	PA5		28					
29	7	6	-	PA4		30	-				
31	6	5	-	PA3		32	-				
33	5	4	4	PA2		34				reserved	
35	4	3	3	PA1		36					
37	3	-	-	PA0		38	-				
39	64	-	-	PF7		40	8, 24,	15, 37	27 and		
41	63	-	-	PF6		42	40, 55 and 56	and 38	28	GND	
43	62	44	-	PD7	1	44					
45	61	43	-	PD6		46					
47	59	41	31	PB5	1	48					
49	60	42	32	/RESET	1	50	57	39	29	VDDA	

Table 2: Pin specification by MCU package for J1 connector

*Caution:* Pins #18, and 34 are <u>reserved</u>. They must not be connected.

57

Table 3: Pin specification	by MCU	package	for J2	connector

Pin N°	TQFP64	TQFP44	TQFP32	Description/ Comments		Pin N°	TQFP64	TQFP44	TQFP32	Description/ Comments	
1	26	17	12	PB7		2	9, 25, 41, 58	16, 40	30	VDD	
3	27	18	13	PC0		4					
5	28	19	14	PC1		6					
7	29	20	15	PC2		8	8, 24,	15, 37	27 and 28	27 and	GND
9	30	21	-	PE4		10	40, 55 and 56	and 38			
11	33	23	17	PC3		12					
13	34	24	18	PC4		14					
15	35	-	-	PE5		16					
17	36	25	-	PE6		18				reserved	
19	37	26	19	PC5		20					
21	38	27	20	PC6		22	_	15, 37 and 38	27 and 28	GND	
23	39	28	21	PC7		24	8, 24,				
25	42	29	22	PD0		26	40, 55 and 56				
27	43	-	-	PE7		28					
29	44	-	-	PF0		30					
31	45	30	-	PF1		32	_				
33	46	31	-	PF2		34				reserved	
35	47	32	23	PD1		36					
37	48	33	24	PD2		38					
39	49	-	-	PF3		40	8, 24,	15, 37	27 and		
41	50	-	-	PF4		42	40, 55 and 56	and 38	28	GND	
43	51	-	-	TLI	1	44					
45	52	34	-	PF5	1	46					
47	53	35	25	PD3		48					
49	54	36	26	PD4	1	50					

*Caution:* Pins #18 and 34 are <u>reserved</u>. They must not be connected.

#### 4 EMULATION CHARACTERISTICS

#### 4.1 On-chip peripherals configuration

You can configure certain on-chip peripherals in ST7 Visual Develop's **MCU Configuration** dialog box so that the ST7-DVP3 accurately emulates the target device. The on-chip peripheral options available for configuration for the ST7MDT25-DVP3 are described in this section.

#### MCU

In STVD7's **MCU Selection** window, choose the MCU that you are using in your application. A complete and up-to-date listing of supported MCU's for your ST7MDT25-DVP3 emulator is provided in the current version of the *STVD7 Release Notes*.

#### Fosc

The clock frequency (F<sub>OSC</sub>) options are summarized in *Table 4* below.

Clock options	Clock Source Location
16 MHz 8 MHz 4 MHz 2 MHz	On probe
External	Provided by user via the EXTCLK pin on connector W3 of the ST7-DVP3 Main Emulation Board.

#### Table 4: Clock frequency options

#### F<sub>CPU</sub>

The CPU frequency ( $F_{CPU}$ ) is always in the range from 250 KHz to 8 MHz even if slow mode or PLL are selected.

The relationship between  $F_{CPU}$  and  $F_{OSC}$  is the following:

- if PLL is OFF: F<sub>CPU</sub> = (F<sub>OSC</sub> / 2) / Slow mode
- if PLL is ON: F<sub>CPU</sub> = (F<sub>OSC</sub> \* 2) / Slow mode

#### MCC (Main Clock Counter)

Allows you to configure the Main Clock Counter to:

**Frozen when not run:** The counter runs when the application is running, but stops if a break occurs.

**Free when not run:** The counter runs even when the application is stopped. Note that this counter is also used as a prescaler for the watchdog counter.

#### PWM (Pulse Width Modulated Auto-reload Timer)

The Pulse Width Modulated Auto-reload Timer consists of an 8-bit counter with compare and capture features and a 7-bit prescaler clock source. Among other uses, it can be used to wake up the MCU from Wait or Halt modes.

You have the following two configuration options:

**Frozen when not run:** The timer runs when the application is running, but stops if a break occurs.

Free when not run: The counter runs even when the application is stopped.

#### Timer\_16 and Timer\_8

A 16-bit and an 8-bit timer, Timer\_16 and Timer\_8 respectively, are available. They consist of a 16-bit and 8-bit free-running counter driven by a programmable prescaler. Both timers feature output compare, pulse width modulation (PWM) and input capture functions with associated registers.

You can choose between two options:

- **Frozen\_when\_not\_run:** the counter will run while the application runs, but when a breakpoint is encountered, the counter will stop.
- Free\_when\_not\_run: the counter will continue to run even if a breakpoint is encountered.

#### AFI\_MAP\_0 (AFI Mapping 0)

This option allows the mapping of alternate pin functions for PD1 and PC1.

You can specify one of two configurations:

**Timer 16 ICAP2 on PC1:** PC1 is used for the input capture function of the 16-bit timer.

**Timer 16 ICAP2 on PD1:** PD1 is used for the input capture function of the 16-bit timer.



#### AFI\_MAP\_1 (AFI Mapping 1)

This option allows you to map the 16-bit timer functions to specific pins when Local Interconnect Network Serial Communication Interface (LINSCI) is enabled.

You can specify one of two configurations:

**T16 on PB & PC LINSCI on PD:** PD3, PD4 and PD5 are used for LINSCI functions and 16-bit timer functions are mapped to PB6, PB7 and PC0.

**T16 on PD LINSCI disable:** LINSCI functions are disabled and 16-bit timer functions are mapped to PD3, PD4 and PD5.

#### CSS (Clock Security System)

This option allows you to *Enable* or *Disable* the clock security system function (CSS) which includes the clock filter and the backup safe oscillator. When enabled, the selected OSCRANGE is used to determine the operating frequency range. If the operating frequency goes outside of the specified range, the clock source will be switched to the backup oscillator.

### OSCRANGE

This option allows you to select the normal operating frequency range for the Clock Security System (CSS). The following operating frequency range options are available:

- HS: 16..8 MHz
- MS: 8..4 MHz
- MP: 4..2 MHz
- LP: 2..1 MHz

#### PLL

This option allows you to *Enable* or *Disable* the PLL which allows the multiplication by two of the main input clock frequency. The PLL is guaranteed only when the input frequency is between 2 and 4 MHz.

For more information about the PLL, refer to your ST72561 Datasheet.

#### **RSTC (Reset clock cycle selection)**

This option allows you to select the number of CPU cycles applied during the RESET phase and when exiting HALT mode. You can choose between *4096 CPU cycles* and *256 CPU cycles*.

#### WDG.HALT (Watchdog halt)

There are two options:

- **Reset:** when the Watchdog is enabled and a Halt instruction is encountered in the executable code, a chip reset will be performed.
- **No Reset:** no chip reset is performed upon a Halt instruction.

#### WDG.SW (Watchdog)

This option allows you to choose whether the watchdog timer is enabled by software or by hardware.

For more information, refer to your *ST72561 Datasheet*.

#### 4.2 Emulation functional limitations and discrepancies

- Evolutions of all discrepancies according to the hardware used are available in in STVD7's **Emulator Discrepancies** dialog box.
- 5V is the only power supply configuration for the ST7MDT25-DVP3 emulator. The SW1 switch located on the ST7-DVP3 Main Emulation Board should be set to the 5V position whenever you use the ST7MDT25-DVP3 target emulation board.
- *Note:* Even when set to the 3.3V position, the emulator functions at 5V. While there is no risk of damaging your emulator, leaving the switch set to 3.3V may cause STVD7 to malfunction.

Consequences on Port I/Os are:

- Port E and F I/Os are always TTL 3.3V compatible regardless of the SW1 position chosen.
- Ports other than E and F I/Os are 5V CMOS compatible regardless of the position of SW1.

#### 5 PROGRAMMING WITH YOUR ST7MDT25-DVP3

Once you have finished refining your application software, you can use your ST7MDT25-DVP3 emulator to in-circuit program the application to a supported ST7 with Flash memory.

For more information about your emulator's In-Circuit Programming feature, refer to the *ST7-DVP3 Emulator User Manual*.

#### APPENDIX A: INSTALLING CONNECTORS FOR THE TQFP64/44 ADAPTER

Installing two 40-pin SAMTEC connectors on your application board, will allow you to connect your emulator directly to your application board using the flat cables and the TQFP64/44 adapter. The connectors that you will need to install correspond to W1 and W2 on the adapter. These are 40-pin SAMTEC connectors, Ref.: TFM 120-22-S-D-A.

When designing your application board with the corresponding SAMTEC connectors, you must also be sure to orient them correctly and leave enough clearance to accommodate the adapter, in addition to ensuring the pin connections required by the emulator.

#### **Physical connection constraints**

57/

The following schematic (*Figure 15*) will help you physically orient the connectors on your application board to receive the TQFP64/44 adapter. When installing the connectors, be careful to ensure that:

- connectors are correctly oriented relative to the TQFP64/44 adapter.
- the distance between the connectors is 1400 mils, measured as shown in *Figure 15*
- other application components do not impede the connection of the adapter.



Figure 15: TQFP64/44 adapter (DB612) dimensions

#### Required pin connections for emulation

When installing the connectors, you must ensure the pin connections shown in the following tables:

- Table 5 for the W1 connector
- Table 6 for the W2 connector

The pin connections depend on the package of the MCU you are emulating.

#### Table 5: Pin specification by MCU package for W1 connector

Din Nº	Conne	cts to M	CU Pin	Decemination	Conne	cts to M	Description		
	TQFP64	TQFP44	TQFP32	Description		TQFP64	TQFP44	TQFP32	Description
1					2				
3	57	39	29	VDDA	4	58	40	30	VDD_0
5	59	41	31	PD5	6	60	42	32	/RESET
7	61	43		PD6	8	62	44		PD7
9	63			PF6	10	64			PF7
11	1	1	1	OSC1	12	2	2	2	OSC2
13	3			PA0	14	4	3	3	PA1
15	5	4	4	PA2	16	6	5		PA3
17	7	6		PA4	18	8			VSS_S
19					20				
21					22				
23	9			VDD_3	24	10	7	5	PA5
25	11	8		PA6	26	12			PA7
27	13			PB0	28	14	9	6	PB1
29	15	10	7	PB2	30	16	11	8	PB3
31					32				
33	17			PE0	34	18			PE1
35	19	12	9	PB4	36	20			PE2
37	21			PE3	38	22	13	10	PB5
39	23	14	11	PB6	40	24	15		VSS_2

Din Nº	Connects to MCU Pin			Description	Din Nº	Conne	Description		
PIII N	TQFP64	TQFP44	TQFP32	Description	PIIIN	TQFP64	TQFP44	TQFP32	Description
1					2				
3	55	37	27	VSSA	4	56	38	28	VSS_0
5	53	35	25	PD3	6	54	36	26	PD4
7	51			TLI	8	52	34		PF5
9	49			PF3	10	50			PF4
11	47	32	23	PD1	12	48	33	24	PD2
13	45	30		PF1	14	46	31		PF2
15	43			PE7	16	44			PF0
17	41			VDD_1	18	42	29	22	PD0
19					20				
21					22				
23	39	28	21	PC7	24	40			VSS_1
25	37	26	19	PC5	26	38	27	20	PC6
27	35			PE5	28	36	25		PE6
29	33	23	17	PC3	30	34	24	18	PC4
31	31			NC	32	32	22	16	VPP
33	29	20	15	PC2	34	30	21		PE4
35	27	18	13	PC0	36	28	19	14	PC1
37	25	16		VDD_2	38	26	17	12	PB7
39					40				

57

Table 6: Pin specification by MCU package for W2 connector

#### APPENDIX B EMC CONFORMITY AND SAFETY REQUIREMENTS

This product respects the EMC requirements of the European guideline 89/336/ EEC under the following conditions:

- Any tester, equipment, or tool used at any production step, or for any manipulation of semiconductor devices, must have its shield connected to ground.
- All provided ferrites must be attached as described in the hardware installation instructions of the relevant user manual(s).
- The product must be placed on a conductive table top, made of steel or clean aluminum, or covered by an antistatic surface (superficial resistivity equal to or higher than 0.5 M $\Omega$ /cm<sup>2</sup>), grounded through a ground cable (conductive cable from protected equipment to ground isolated with a 1 M $\Omega$  resistor placed in series). All manipulation of finished must be done at such a grounded worktable.
- The worktable must be free of all non-antistatic plastic objects.
- An antistatic floor covering grounded through a conductive ground cable (with serial resistor between 0.9 and 1.5 M $\Omega$ ) should be used.
- It is recommended that you wear an antistatic wrist or ankle strap, connected to the antistatic floor covering or to the grounded equipment.
- If no antistatic wrist or ankle strap is worn, before each manipulation of the powered-on tool, you must touch the surface of the grounded worktable.
- It is recommended that antistatic gloves or finger coats be worn.
- It is recommended that nylon clothing be avoided while performing any manipulation of parts.
- If you are using this product under conditions where there may be blackouts or power surges (such as during an electrical storm), it is recommended that you isolate it by elevating it at least 10 cm above the grounded work surface using blocks of insulating material.

#### **PRODUCT SUPPORT**

If you experience any problems with this product, if you need spare parts or repairs, contact the distributor or the STMicroelectronics sales office where you purchased the product. Phone numbers for major sales regions are provided in the *Contact List*, below.

In addition, at our Internet site **www.st.com/mcu**, you will find a complete listing of ST sales offices and distributors, as well as documentation, software downloads and user discussion groups to help you answer questions and stay up to date with our latest product developments.

## Software updates

All our latest software and related documentation are available for download from the ST Internet site, **www.st.com/mcu**. For information about firmware and hardware revisions, call your distributor or ST using the *Contact List* provided below.

## Hardware spare parts

Your development tool comes with the hardware you need to set it up, connect it to your PC and connect to your application. However, some components can be bought separately if you need additional ones. You can order extra components, such as sockets and adapters, from STMicroelectronics, from the component manufacturer or from a distributor.

#### Sockets

Complete documentation and ordering information for P/TQFP sockets from Yamaichi, Ironwood, CAB and Enplas are provided at the following Internet sites:

www.yamaichi.de www.ironwoodelectronics.com www.cabgmbh.com www.enplas.com

#### Connectors

Complete documentation and ordering information for SAMTEC connectors is provided at **www.samtec.com**.

47/

# Getting prepared before you call

Collect the following information about the product before contacting ST or your distributor:

- 1 Name of the company where you purchased the product.
- 2 Date of purchase.
- **3** Order Code: Refer to the side your emulators box. The order code will depend on the region in which is was ordered (i.e. the UK, Continental Europe or the USA).
- **4** Serial Number: The serial number is found on the Global Reference card provided with the emulator.
- 5 TEB (Target Emulation Board) hardware and firmware versions: The hardware and firmware versions can be found by opening an STVD7 session, entering the debug context and selecting *Help>About* from the main menu. The TEB version numbers are given in the *Target box* scroll downwards until you find the TEB version (hardware) and TEB PLD version (firmware).
- **6** Target Device: The sales type of the ST microcontroller you are using in your application.

# **Contact List**

Canada and East Coast	Mid West
STMicroelectronics	STMicroelectronics
Lexington Corporate Center	1300 East Woodfield Road, Suite 410
10 Maguire Road, Building 1, 3rd floor	Schaumburg, IL 60173
Lexington, MA 02421	Phone: (847) 585-3000
Phone: (781) 402-2650	

#### **North America**

#### West coast

STMicroelectronics, Inc. 1060 E. Brokaw Road San Jose, CA 95131 Phone: (408) 452-8585

Note: For American and Canadian customers seeking technical support the US/ Canada is split in 3 territories. According to your area, contact the appropriate sales office from the list above and ask to be transferred to an 8-bit microcontroller Field Applications Engineer.

#### Europe

France +33 (0)1 47 40 75 75 Germany +49 89 46 00 60 U.K. +44 162 889 0800

#### **Asia/Pacific Region**

Japan +81 3 3280 4120 Hong-Kong +85 2 2861 5700 Sydney +61 2 9580 3811 Taipei +88 6 2 2378 8088

<u>/۲</u>

Information furnished is believed to be accurate and reliable. However, STMicroelectronics assumes no responsibility for the consequences of use of such information nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of STMicroelectronics. Specifications mentioned in this publication are subject to change without notice. This publication supersedes and replaces all information previously supplied. STMicroelectronics products are not authorized for use as critical components in life support devices or systems without the express written approval of STMicroelectronics.

The ST logo is a registered trademark of STMicroelectronics

©2004 STMicroelectronics - All Rights Reserved.

Purchase of I<sup>2</sup>C Components by STMicroelectronics conveys a license under the Philips I<sup>2</sup>C Patent. Rights to use these components in an I<sup>2</sup>C system is granted provided that the system conforms to the I<sup>2</sup>C Standard Specification as defined by Philips.

STMicroelectronics Group of Companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan -Malaysia - Malta - Morocco - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com