



AMP INCORPORATED  
HARRISBURG, PENNA.

A-MP\* EXTRACTION TOOL  
(CATALOG NO. 91019-3)  
FOR A-MP TYPE XII CONTACTS

IS 7276

RELEASED 6-10-66

REVISED

CONNECTOR PRODUCTS DIVISION

1. This Tool (see Figure 1) is used to extract A-MP Type XII Contacts from their Housings. A list of the Contacts is shown in the chart in Figure 2. Read these instructions carefully before using the Tool.

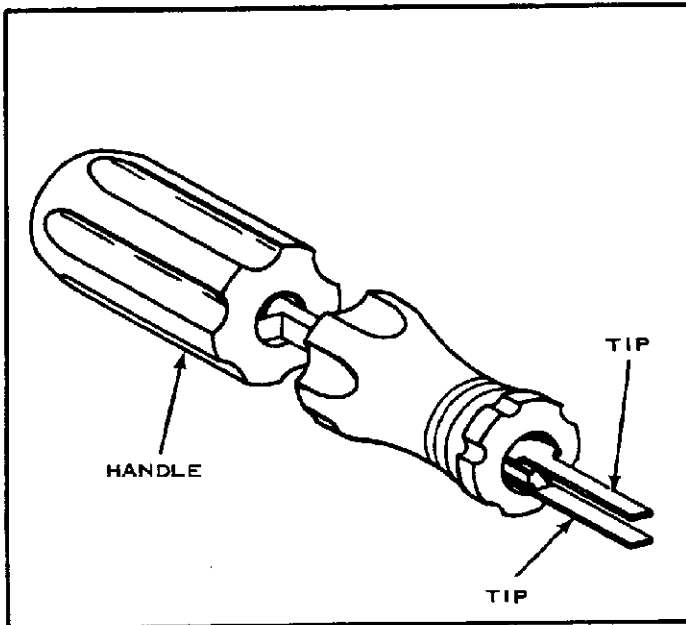


FIG. 1

2. EXTRACTION MALE CONTACT

- (a) Pull rear section of Handle back.
- (b) Keeping sections of Handle separated, slide Tool Tips over Male Contact and into Offsets in Cavity. See Figure 3.
- (c) Push Tips of Tool into Housing until they bottom in Cavity.
- (d) Keeping Tool bottomed in Cavity, push rear section of Handle toward Housing.
- (e) Remove Contact by pulling it out of rear of Cavity.

| CONTACT NUMBER      |                  |
|---------------------|------------------|
| FEMALE              | MALE             |
| 66258<br>(66252 LP) | 66261 (66255 LP) |
|                     | 66262 (66256 LP) |
|                     | 66329 (66330 LP) |
| 66257<br>(66251 LP) | 66259 (66253 LP) |
|                     | 66260 (66254 LP) |
|                     | 66326 (66327 LP) |

FIG. 2

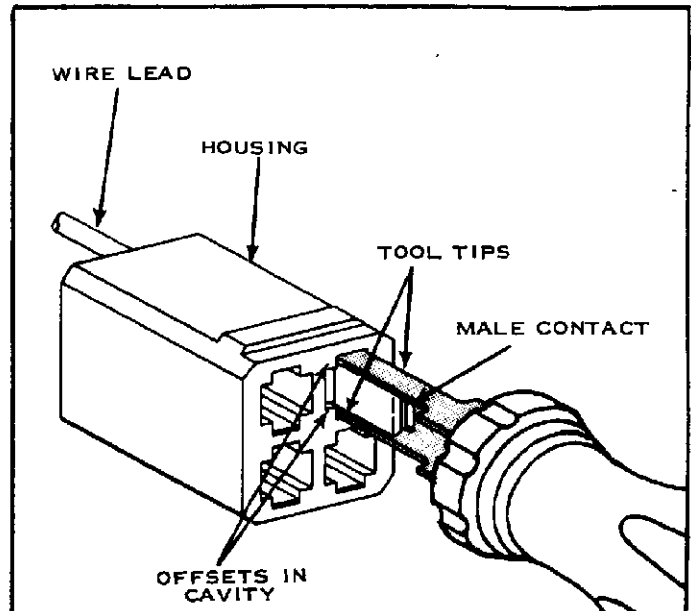


FIG. 3

3. EXTRACTION FEMALE CONTACT

- (a) Insert Tool Tips into Offsets in Cavity as shown in Figure 4.
- (b) Push Tool into Housing until it bottoms in Cavity. Note that rear section of the Handle will back out of Tool.
- (c) Keeping Tool bottomed in Cavity, push rear section of Handle toward Housing.
- (d) Remove Contact by pulling it out of rear of Cavity.

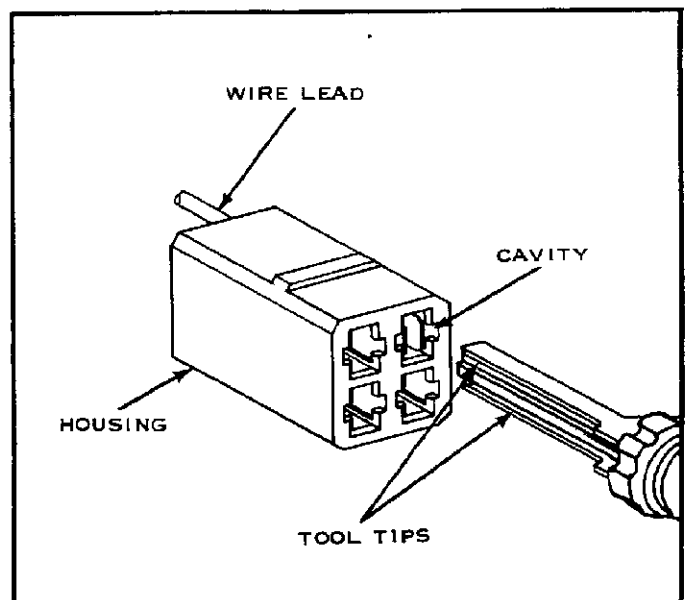


FIG. 4

© 1966 by AMP Incorporated. All international rights reserved. A-MP®  
Products covered by U. S. and foreign patents and/or patents pending.