

User's Guide SLVU150–January 2006

TPS61059EVM-141

This user's guide describes the characteristics, operation, and use of the TPS6105xEVM-141 evaluation module (EVM). This EVM demonstrates the Texas Instruments TPS6105x synchronous boost converter with down mode used to power high-current, white-light LEDs for photo flash applications. This user's guide includes setup instructions, a schematic diagram, a bill of materials (BOM), and PCB layout drawings for the evaluation module.

Contents

1	Introduction	1
2	Setup	2
3	Board Layout	10
4	Schematic and Bill of Materials	12
5	Related Documentation From Texas Instruments	14

List of Figures

1	Timing From LED Off to 700-mA Flash	. 4
2	Timing From 200-mA Movie Light to 700-mA Flash	. 5
3	Timing From LED Off to 700-mA Flash	. 6
4	Timing Between Flashes	. 7
5	Timing Between Flashes Using Pushbutton	. 8
6	LED Flash Interrupted With FLASH OFF Input	. 9
7	Efficiency	. 9
8	Assembly Layer	10
9	Top Layer Routing	11
10	Bottom Layer Routing	12
11	TPS6105xEVM-141 Schematic	

List of Tables

1	J3 Pin Functions	2
2	HPA141A Bill of Materials	14

1 Introduction

The Texas Instruments TPS6105xEVM-141 evaluation module (EVM) helps designers evaluate the operation and performance of the TPS61058 or TPS61059 high-current boost converters for white-light photo flash applications. The TPS6105x has an externally programmed LED current so that the LED can be used as a flash for still photography and as a torch, or movie light, for digital movies.

The EVM has one white-flash LED, the TPS6105x converter, and a timing circuit used to make the EVM a stand-alone flash module.

If desired, other LEDs or LED current settings can be tested on the EVM by changing the feedback resistors on the EVM. See the TPS6105x data sheet for information on calculating new resistor values.



Setup

2 Setup

This section describes the jumpers and connectors on the EVM as well as how to properly connect, set up, and use the TPS6105xEVM-141.

2.1 Input / Output Connector Descriptions

2.1.1 J1 – VIN

This is the positive input voltage connection to the converter. The EVM can be powered from any voltage between 2.7 V and 5.5 V. The leads to the input supply should be twisted and kept as short as possible to minimize EMI transmission and input voltage droop.

2.1.2 J2 – GND

This is the input return connection for the input power supply.

2.1.3 J3 – External Measurement or Control Connector

This connector is used to monitor the flash and enable inputs of the TPS6105x. An external controller can also be connected to this connector to operate the EVM flash function. R11 and R12 should be removed and left open if an external controller is used to control the EVM. The pin functions of J3 when using an external controller are shown in Table 1.

Pin 1 – EN: Output of timing circuit. Drives EN pin of the TPS6105x.

Pin 2 – FLASH: Output of timing circuit. Drives FLASH signal of TPS6105x. A low on this pin produces a high-current flash.

Pin 3 – FLASH OFF: Input to timing circuit. A high on this pin immediately forces the TPS6105x to stop a high-current flash. This pin can be used to interrupt or mask off a high-current flash. The state of this pin does not effect the timing of the timing circuit.

Pin 4 – GND

EN ⁽¹⁾	FLASH OFF ⁽¹⁾	FLASH ⁽¹⁾	FUNCTION
L	Х	Х	OFF
Н	L	Н	MOVIE LIGHT
Н	L	L	FLASH
Н	Н	Н	MOVIE LIGHT
Н	Н	L	MOVIE LIGHT

Table 1. J3 Pin Function

(1) X = don't care; L = 0 V; H = 1.8 V

2.1.4 JP1 – Torch Enable

JP1 is used to enable torch mode. Placing a shorting bar across pins 1 and 2 of JP1 turns the torch mode on. In torch mode, the LED is constantly illuminated with an LED current of approximately 200 mA. If the *FLASH* button is pushed, the LED flashes at the *flash* current limit of 700 mA and then returns to torch mode after the flash time. If JP1 is left open, the LED is off. If the *FLASH* button is pushed with JP1 open, then the LED flashes and returns to the off state after the flash time.



2.2 Setup

2.2.1 EVM Factory Configuration

The EVM is configured to provide the following nominal operating conditions:

- Movie light current: 200 mA
- Flash current: 700 mA
- Precharge current: 42 mA
- Length of flash: 320 ms
- Time between flashes: 3.2 s

2.2.2 Changing Flash Timing

The length of flash and time between flashes can be changed by changing capacitors C15 and C9. Capacitor C15 sets the length of the flash, and capacitor C9 sets the time between flashes. The time of each period can be calculated, in seconds, using Equation 1 where C(nF) is the value of the corresponding timing capacitor in nanoFarads.

$$t_{sec} = \frac{C_{(nF)}}{175} + 0.0005$$
(1)

For example, the EVM has a 0.056μ F capacitor installed for C15 which determines the length of the flash. Using Equation 1, a 0.056μ F capacitor provides a 320-ms flash.

Care must be taken when changing the timing so that the maximum power rating of the LED (D1) or sense resistor (R7) are not exceeded. The average power of these components can be calculated using the duty cycle of the flash circuit. The flash duty cycle is the time the LED is in flash mode divided by the sum of the flash mode and time between flashes. The duty cycle can be calculated using Equation 2 with the value of the timing capacitors C15 and C9.

Duty Cycle =
$$\frac{C_{15(nF)} + 0.0875}{C_{15(nF)} + C_{9(nF)} + 0.175}$$
 (2)

The average power dissipated in the sense resistor R7 is calculated using Equation 3. In Equation 3, I_{flash} is the flash current level, and $I_{noflash}$ is the current when not flashing which is zero or the torch current value depending on the setting of JP1.

AvgPower $R_7 = I^2$ flash $R_7D + I^2$ noflash $R_7(1 - D)$

The average power dissipated in the LED is calculated using Equation 4. In Equation 4, V_{FLED} is the forward voltage of the LED, I_{flash} is the flash current level, and $I_{noflash}$ is the current when not flashing which is zero or the torch current value depending on the setting of JP1.

$$AvgPowerLED = I_{flash}V_{FLED}D + I_{noflash}V_{FLED}(1 - D)$$
(4)

2.2.3 Using External Control

The EVM has provisions to disable the onboard timing circuit and use an external controller. An external controller can be connected to connector J3 to drive the enable and flash inputs of the TPS6105x. Resistors R11 and R12 should be removed and left open on the EVM to avoid signal contention between the onboard timing circuit and the external controller.

2.2.4 Operation

- 1. Configure JP1 to enable or disable torch mode as desired.
- 2. Connect the input voltage return to J2.
- 3. Connect the positive input voltage to J1.
- 4. Turn on input voltage. If JP1 is shorted, then the LED turns on in torch mode. If JP1 is open, the LED remains off.
- 5. Push the FLASH button to flash the LED.
- 6. The LED flashes for approximately 320 ms.
- 7. If JP1 is shorted, then the LED returns to torch mode. If JP1 is open, the LED turns off.

(3)




Setup

The EVM board has a built-in timing circuit to generate the necessary signals for torch and flash modes. The timing circuit sets the length of the flash. After a flash, the timing circuit disables the flash function for approximately 3.2 s. Pressing the flash button during this 3-s period has no effect. This keeps the average power dissipation of the LED below the maximum power limitation of the LED.

The *FLASH OFF* input on J3 can be used to force the LED flash off during a flash sequence. This is intended to turn the flash off in camera phones while the power amplifier is transmitting. A logic 1 on pin 3 of J3 extinguishes the flash as long as the input is high. This does not reset the timing of the timing circuit.

2.2.5 Test Results

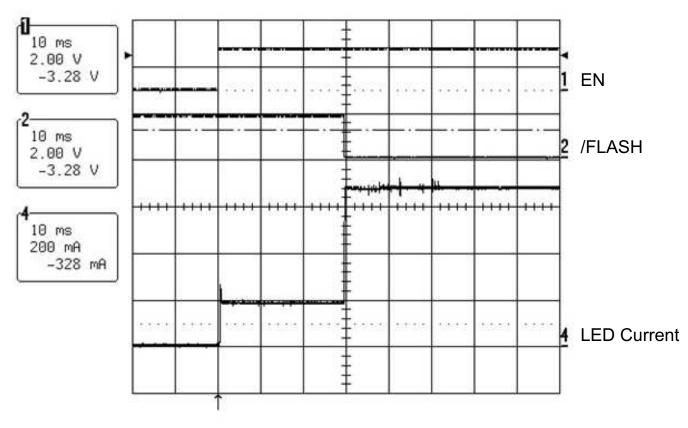


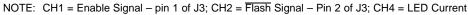


Figure 1. Timing From LED Off to 700-mA Flash




NOTE: CH1 = Enable Signal - pin 1 of J3; CH2 = Flash Signal - Pin 2 of J3; CH4 = LED Current


Figure 2. Timing From 200-mA Movie Light to 700-mA Flash

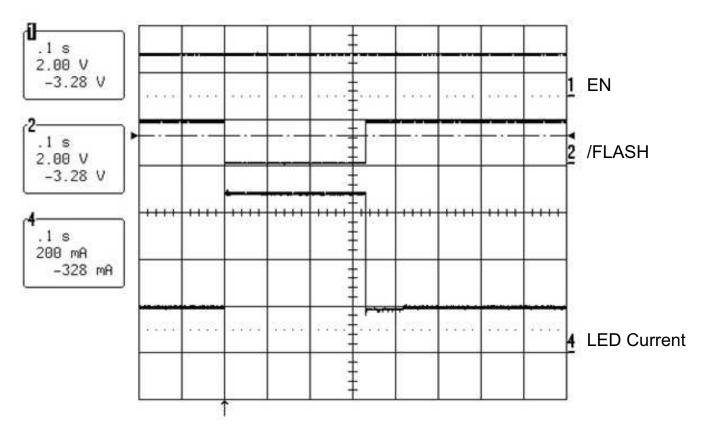



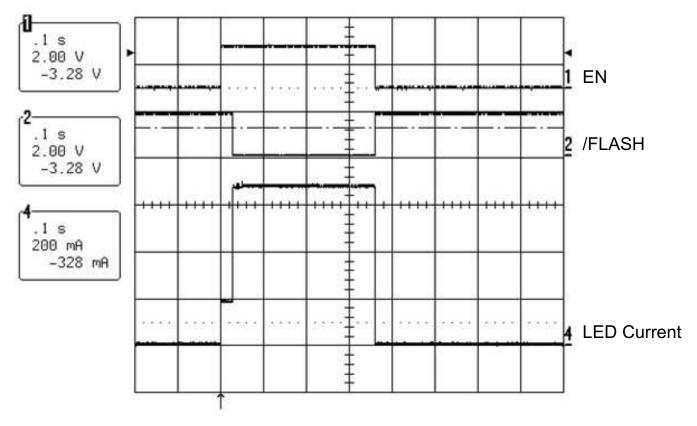

NOTE: CH1 = Enable Signal – pin 1 of J3; CH2 = Flash Signal – Pin 2 of J3; CH4 = LED Current **Figure 3. Timing From LED Off to 700-mA Flash**

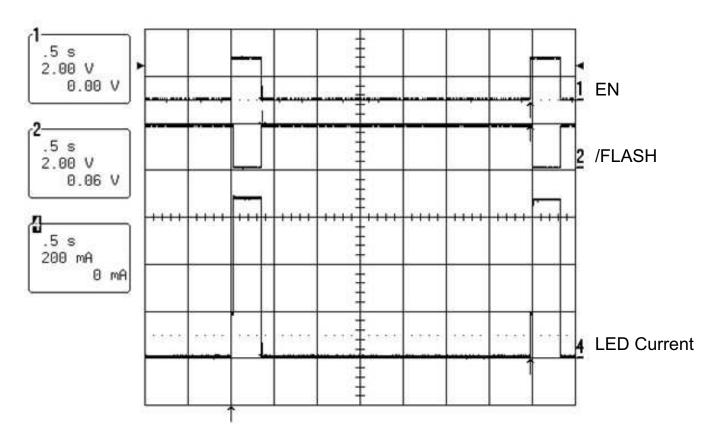

NOTE: CH1 = Enable Signal – pin 1 of J3; CH2 = Flash Signal – Pin 2 of J3; CH4 = LED Current **Figure 4. Timing Between Flashes**





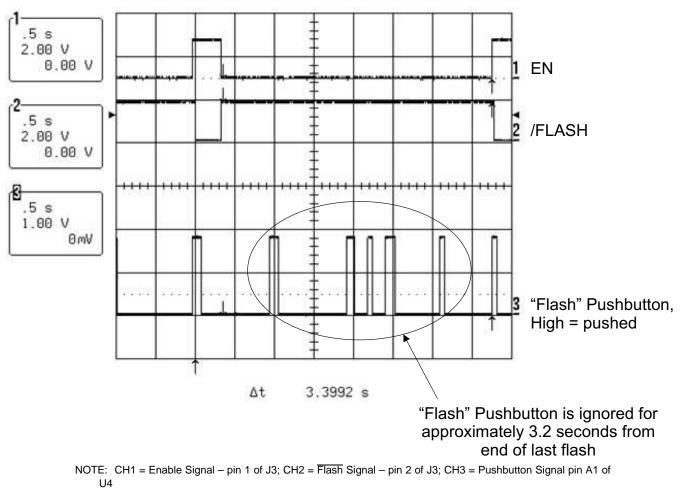


Figure 5. Timing Between Flashes Using Pushbutton



NOTE: CH1 = FLASH- pin 2 of J3; CH2 = FLASH OFF - Pin 3 of J3; LED Current

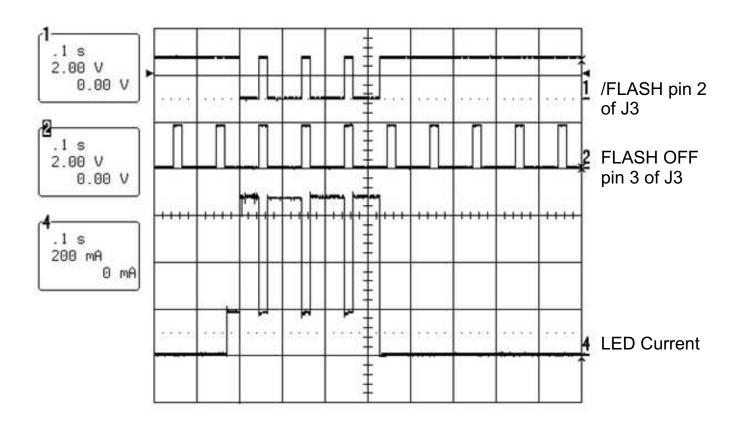

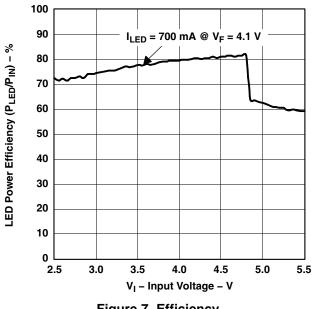



3 Board Layout

This section provides the TPS6105xEVM-141 board layout and illustrations.

3.1 Layout

Figure 8, Figure 9, and Figure 10 show the board layout for the TPS6105xEVM-141 printed-circuit board.

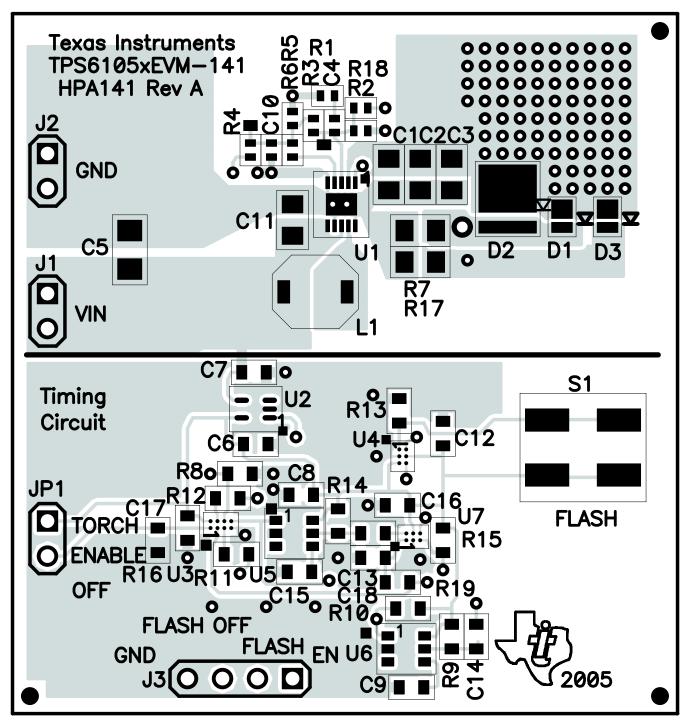


Figure 8. Assembly Layer





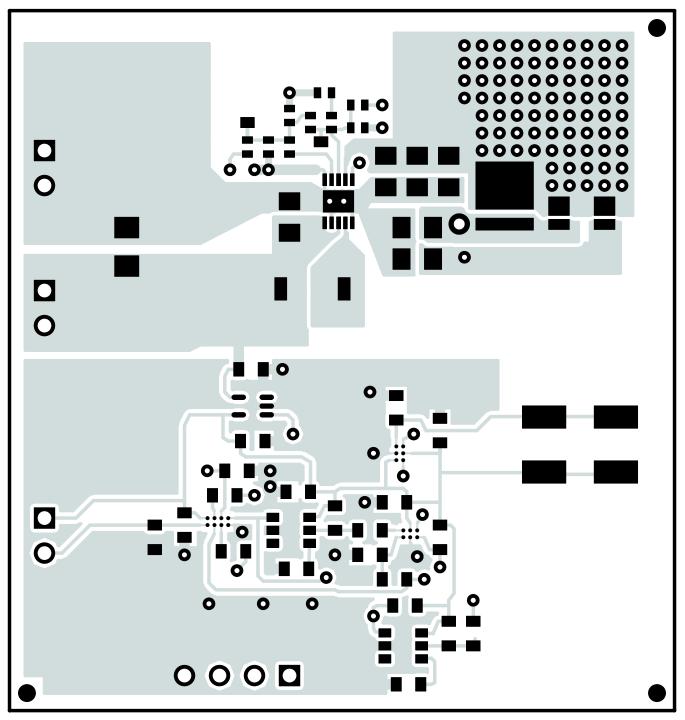


Figure 9. Top Layer Routing



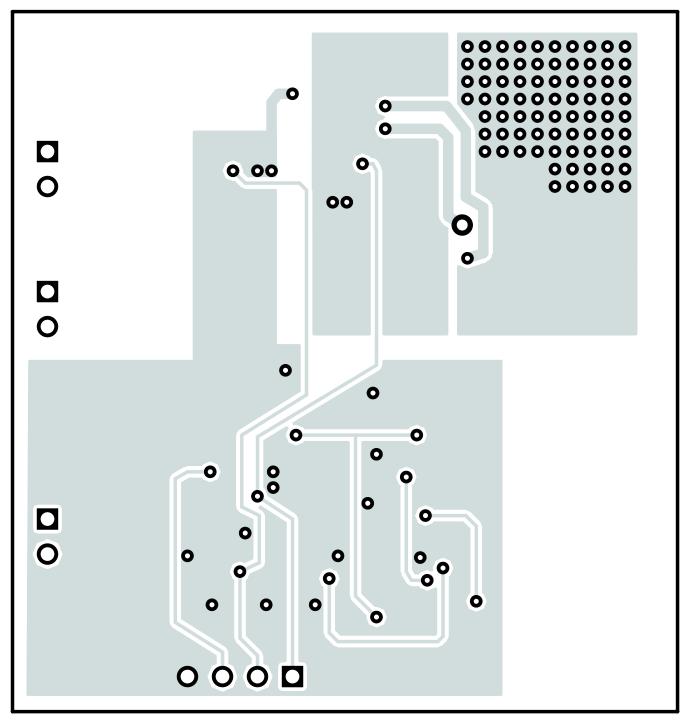



Figure 10. Bottom Layer Routing

4 Schematic and Bill of Materials

This section provides the TPS6105xEVM-141 schematic and bill of materials.



4.1 Schematic

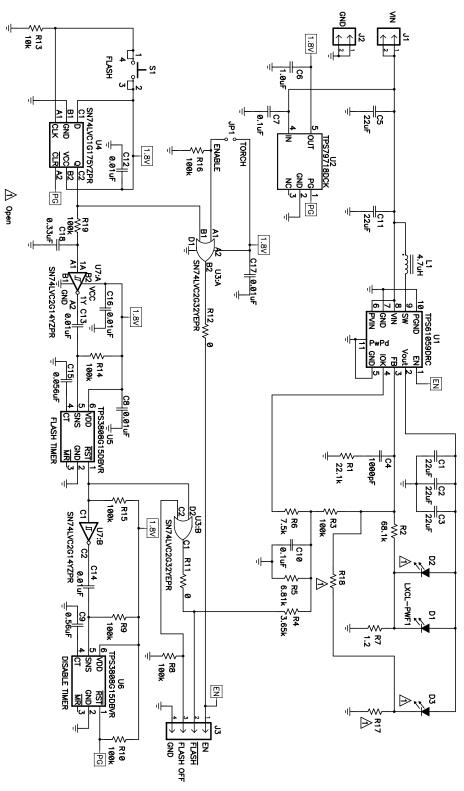





4.2 Bill of Materials

COUNT	Ref Des	Value	Description	Size	Part Number	MFR
4	C1, C2, C3, C11	22 μF	Capacitor, Ceramic, 6.3V, X5R, 20%	0805	C2012X5R0J226MTJ	TDK
1	C10	0.1 μF	Capacitor, Ceramic, 25V, X5R, 10%	0402	C1005X5R1E104K	TDK
1	C15	0.056 μF	Capacitor, Ceramic, 16V, X7R, 10%	0603	GRM188R71C563KC01	Murata
1	C18	0.33 μF	Capacitor, Ceramic, 10V, X5R, 10%	0603	C1608X5R1A334KB	TDK
1	C4	1000 pF	Capacitor, Ceramic, 25V, C0G, 5%	0402	C1005C0G1E102K	TDK
1	C5	22 μF	Capacitor, Ceramic, 10V, X5R, 10%	1206	C3216X5R1A226K	TDK
1	C6	1.0 μF	Capacitor, Ceramic, 25V, X5R, 10%	0603	C1608X5R1E105K	TDK
1	C7	0.1 μF	Capacitor, Ceramic, 50V, X7R, 15%	0603	C1608X7R1H104K	TDK
6	C8, C12, C13, C14, C16, C17	0.01 μF	Capacitor, Ceramic, 25V, C0G, 5%	0603	C1608C0G1E103K	TDK
1	C9	0.56 μF	Capacitor, Ceramic, 10V, X5R, 10%	0603	C0603C564K8PACTU	Kemet
1	D1		Diode, Flash, 1amp, Vfwd 3.9V	0.065 × 0.080	LXCL-PWF1	Lumileds Lighting
0	D2	Open	Diode, LED	1210		
0	D3	Open	Diode, Flash, 1amp, Vfwd 3.9V	0.065×0.080		
2	J1, J2		Header, 2 pin, 100mil spacing, (36-pin strip)	0.100 × 2	PTC36SAAN	Sullins
1	J3		Header, 4 pin, 100mil spacing, (36-pin strip)	0.100 × 4	PTC36SAAN	Sullins
1	JP1		Header, 2 pin, 100mil spacing, (36-pin strip)	0.100 × 2	PTC36SAAN	Sullins
1	L1	4.7 μΗ	Inductor, SMT, 1.1A, 120 m Ω	0.177×0.185	VLF5014AT-4R7M1R1	TDK
1	R1	22.1k	Resistor, Chip, 1/16W, 1%	0402	Std	Std
2	R11, R12	0	Resistor, Chip, 1/16W, 1%	0603	Std	Std
1	R13	10k	Resistor, Chip, 1/16W, 1%	0603	Std	Std
0	R17	Open	Resistor, Chip, 1/10W, 1%	0805		
0	R18	Open	Resistor, Chip, 1/16W, 1%	0402		
1	R2	68.1k	Resistor, Chip, 1/16W, 1%	0402	Std	Std
1	R3	100k	Resistor, Chip, 1/16W, 1%	0402	Std	Std
1	R4	3.65k	Resistor, Chip, 1/16W, 1%	0402	Std	Std
1	R5	6.81k	Resistor, Chip, 1/16W, 1%	0402	Std	Std
1	R6	7.5k	Resistor, Chip, 1/16W, 1%	0402	Std	Std
1	R7	1.2	Resistor, Chip, 1/10W, 1%	0805	Std	Std
7	R8, R9, R10, R14, R15, R16, R19	100k	Resistor, Chip, 1/16W, 1%	0603	Std	Std
1	S1		Switch, SPST, PB Momentary, Sealed Washable	0.245×0.251	KT11P2JM	C & K
1	U1		IC, Synchronous Boost Converter With Down Mode High Power White LED Driver	SON-10	TPS61059DRC	TI
1	U2		IC, Regulator, LDO, Micropower, $1.1\mu A$ at 10mA. Vin 0.30–5.5V	SOP-5 (DCK)	TPS79718DCK	ТІ
1	U3		IC, Dual 2-Input Positive-OR Gates	WCSP-8	SN74LVC2G32YEPR	ТІ
1	U4		IC, Single D-Type Flip-Flop With Asynchronous Clear	WCSP-6	SN74LVC1G175YZPR	ТІ
2	U5, U6		IC, Low Quiescent Current, Programmable 1.5V, Delay Time: 1.25ms to 10s	SOT23-6	TPS3808G15DBVR	ТІ
1	U7		IC, Dual Schmitt-Trigger Inverter	WCSP-6	SN74LVC2G14YZPR	TI
1			PCB, 2 ln x 1.9 ln x 0.062 ln		HPA141	Any
1	_		Shunt, 100-mil, Black	0.100	929950-00	3M

Table 2. HPA141A Bill of Materials

5 Related Documentation From Texas Instruments

TPS61058/9 data sheet (SLVS572)

FCC Warnings

This equipment is intended for use in a laboratory test environment only. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to subpart J of part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

EVM TERMS AND CONDITIONS

Texas Instruments (TI) provides the enclosed Evaluation Module and related material (EVM) to you, the user, (you or user) **SUBJECT TO** the terms and conditions set forth below. By accepting and using the EVM, you are indicating that you have read, understand and agree to be bound by these terms and conditions. IF YOU DO NOT AGREE TO BE BOUND BY THESE TERMS AND CONDITIONS, YOU MUST RETURN THE EVM AND NOT USE IT.

This EVM is provided to you by TI and is intended for your **INTERNAL ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY**. It is provided "AS IS" and "WITH ALL FAULTS." It is not considered by TI to be fit for commercial use. As such, the EVM may be incomplete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety measures typically found in the end product. As a prototype, the EVM does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may not meet the technical requirements of the directive.

Should this EVM not meet the specifications indicated in the EVM User's Guide, it may be returned within 30 days from the date of delivery for a full refund of any amount paid by user for the EVM, which user agrees shall be user's sole and exclusive remedy. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY TI TO USER, AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR NON-INFRINGEMENT.

TI shall have no obligation to defend any claim arising from the EVM, including but not limited to claims that the EVM infringes third party intellectual property. Further, TI shall have no liability to user for any costs, losses or damages resulting from any such claims. User shall indemnify and hold TI harmless against any damages, liabilities or costs resulting from any claim, suit or proceeding arising from user's handling or use of the EVM, including but not limited to, (i) claims that the EVM infringes a third party's intellectual property, and (ii) claims arising from the user's use or handling of the EVM. TI shall have no responsibility to defend any such claim, suit or proceeding.

User assumes all responsibility and liability for proper and safe handling and use of the EVM and the evaluation of the EVM. TI shall have no liability for any costs, losses or damages resulting from the use or handling of the EVM. User acknowledges that the EVM may not be regulatory compliant or agency certified (FCC, UL, CE, etc.). Due to the open construction of the EVM it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

EXCEPT TO THE EXTENT OF THE USER'S INDEMNITY OBLIGATIONS SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES WHETHER TI IS NOTIFIED OF THE POSSIBILITY OR NOT.

TI currently deals with a variety of customers for products, and therefore our arrangement with the user is not exclusive.

TI assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

User agrees to read the EVM User's Guide and, specifically, the EVM warnings and Restrictions notice in the EVM User's Guide prior to handling the EVM and the product. This notice contains important safety information about temperatures and voltages.

It is user's responsibility to ensure that persons handling the EVM and the product have electronics training and observe good laboratory practice standards.

By providing user with this EVM, product and services, TI is NOT granting user any license in any patent or other intellectual property right.

EVM WARNINGS AND RESTRICTIONS

It is important to operate this EVM within the input voltage range of 2.7 V to 5.5 V and the output voltage range of 2.5 V to 5.5 V.

Exceeding the specified input range may cause unexpected operation and/or irreversible damage to the EVM. If there are questions concerning the input range, please contact a TI field representative prior to connecting the input power.

Applying loads outside of the specified output range may result in unintended operation and/or possible permanent damage to the EVM. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative.



EVM WARNINGS AND RESTRICTIONS (continued)

During normal operation, some circuit components may have case temperatures greater than 55°C. The EVM is designed to operate properly with certain components above 60°C as long as the input and output ranges are maintained. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors. These types of devices can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during operation, please be aware that these devices may be very warm to the touch.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2006, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products		Applications	
Amplifiers	amplifier.ti.com	Audio	www.ti.com/audio
Data Converters	dataconverter.ti.com	Automotive	www.ti.com/automotive
DSP	dsp.ti.com	Broadband	www.ti.com/broadband
Interface	interface.ti.com	Digital Control	www.ti.com/digitalcontrol
Logic	logic.ti.com	Military	www.ti.com/military
Power Mgmt	power.ti.com	Optical Networking	www.ti.com/opticalnetwork
Microcontrollers	microcontroller.ti.com	Security	www.ti.com/security
		Telephony	www.ti.com/telephony
		Video & Imaging	www.ti.com/video
		Wireless	www.ti.com/wireless

Mailing Address: Texas Instruments

Post Office Box 655303 Dallas, Texas 75265

Copyright © 2006, Texas Instruments Incorporated