

TPS65165EVM-233

The TPS65165EVM-233 takes a 2.5-V to 6-V input rail and provides the three bias-supply voltages and three integrated opamps that are required for TV and monitor TFT-LCD panels. The TPS65165EVM-233 has one boost converter with an integrated low-side FET, one negative charge-pump controller requiring external Schottky diodes, and one fully-integrated positive charge pump. External passive components to support the boost converter include inductors and capacitors, and external components for the charge pumps include capacitors.

Contents

| | | |
|---|---------------------------------------|---|
| 1 | Introduction | 1 |
| 2 | Setup and Test Results | 2 |
| 3 | Board Layout | 5 |
| 4 | Schematic and Bill of Materials | 8 |

List of Figures

| | | |
|---|-----------------------------|---|
| 1 | Startup Waveform | 4 |
| 2 | Layout Recommendation | 5 |
| 3 | Top Assembly | 6 |
| 4 | Top Layer | 6 |
| 5 | Bottom Layer | 7 |

List of Tables

| | | |
|---|---|---|
| 1 | Performance Specification Summary | 1 |
| 2 | Default Jumper Settings | 2 |
| 3 | Bill of Materials..... | 9 |

1 Introduction

This chapter contains background information for the TPS65165EVM-233 evaluation module.

1.1 Specification

Table 1 provides a summary of the TPS65165EVM-233 performance specifications. All specifications are given for an ambient temperature of 25°C.

Table 1. Performance Specification Summary

| Specification | Voltage Range (V) | | | Current Range (mA) | | |
|---------------|-------------------|---------------------|-------|--------------------|-----|------|
| | Min | Typ | Max | Min | Typ | Max |
| VIN | 4.5 | 5 | 5.5 | 5000 | | |
| Vs | 14.7 | 15 | 15.3 | | | 1000 |
| VGL | -5.15 | -5 | -4.85 | | | 50 |
| VGH | 23.0 | 23.8 ⁽¹⁾ | 24.5 | | | 50 |

⁽¹⁾ Assumes that SUP = VS.

1.2 Modifications

The primary goal of this EVM is to facilitate user evaluation of the TPS65165 in a power-supply application for a typical large TFT display. To facilitate user customization of the EVM, the board was designed with devices having 603 or larger footprints. A production-optimized implementation would likely occupy less total board space.

1.2.1 Customizing the Power Supply

The user can change each rail's regulated output voltage by changing the appropriate feedback resistors per the device data sheet ([SLVS723](#)). The user is responsible for not exceeding each output's maximum voltage specifications. In addition, alternate capacitors, inductors and/or diodes can be used. When using alternate capacitors, ensure that at least the minimum recommended capacitance per the data sheet is used, and that the capacitor voltage rating is appropriate for the application. The switching converters are designed to be used with ceramic output capacitors. Using non-ceramic output capacitors with significantly large equivalent series resistances (ESR) can result in larger output ripple or unstable operation of the inductive switching converters. Each charge pump's flying and output capacitors must be ceramic capacitors. When selecting an alternate inductor, use the datasheet design equations to ensure that an appropriate inductance value is selected, and that the inductor current rating is appropriate for the desired output current. Using an inductor with larger dc resistance will result in lower efficiency. When using alternate diodes, ensure that the diode is rated for both the expected peak current and expected power per the datasheet design equations.

The user can change the soft-start time of Vs (boost converter), VGL (negative charge pump), VGH (positive charge pump) by changing the value of C15 on the ADLY pin and C14 on the GDLY pin, respectively. When the EN pin goes high, Vs and VGL start up after a delay time set by C15 on the ADLY pin. C14 on the GDLY pin sets the startup delay time until VGH goes active with CTRL=high.

1.2.2 Input to Output Isolation

The non-synchronous boost converter has a path from input to output, i.e VIN to Vs, through external switching diode D1. Therefore, even though EN is low, the Vs terminal has a voltage equal to $V_{IN} - V_f$ where V_f is the diode forward voltage.

2 Setup and Test Results

This chapter explains the input, output and jumper connections of the TPS65165EVM-233. It also describes how to set up test equipment for evaluating the EVM, and provides test results.

2.1 Connections and Jumpers

The DEFAULT jumper settings are required for the EVM to operate within the specifications of [Table 1](#).

Table 2. Default Jumper Settings

| Jumper | Default Setting |
|------------|-----------------|
| JP1 – EN | GND |
| JP2 – HVS | GND |
| JP3 – CTRL | VIN |
| JP4 – DRN | GND |
| JP5 – POS3 | GND |
| JP6 – POS2 | GND |
| JP7 – NEG2 | OUT2 |
| JP8 – NEG1 | OUT1 |
| JP9 – POS1 | GND |

| | |
|--------------------|--|
| J1-GND: | Ground return connection for negative charge pump (VGL) |
| J2-VGL: | Output voltage of negative charge pump (VGL) |
| J3-GND: | The input power supply ground must be connected to J3 for 5-A capability |
| J4-VIN: | The input power supply positive connection must be connected to J4 for 5-A capability |
| J5-VIN: | Test point for measuring input voltage—not intend for power supply connection. |
| J6-Vs: | Output connection for the main boost converter (Vs) |
| J7-GND: | Ground return connection for the main boost converter (Vs) |
| J8-VGH: | Output connection for the internal high voltage switch (VGH) |
| J9-GND: | Ground return connection for the internal high voltage switch (VGH) |
| J10-GND: | Test point for measuring input ground voltage—not intend for power supply connection |
| J11-OUT3: | Output voltage of opamp 3. Half the voltage of Vs is generated in this EVM. |
| J12-POUT: | Output voltage of the positive charge pump—internally connected to the high voltage switch Q4 |
| J13-GND: | Ground return of POUT |
| JP1-EN: | When EN pin is connected to VIN, the IC is enabled. When EN is connected to GND, the IC is disabled. The EN pin must be connected to either VIN or GND, and not left floating. |
| JP2-HVS: | When the HVS pin is connected to VIN, high-voltage stress test is enabled (Vs goes high, and VGH goes to a fixed 30 V). When the HVS pin is connected to GND, the high-voltage stress test is disabled. |
| JP3-CTRL: | When the CTRL pin is connected to VIN, internal MOSFET Q4 between POUT and VGH is on, and Q5 between VGH and DRN is off. When the CTRL pin is connected GND, it is the opposite; Q4 is off and Q5 is on. The user can do Gate-voltage shaping by applying a pulsed waveform to the CTRL pin. |
| JP4-DRN: | Connect the discharge resistor for Gate-voltage shaping to this pin. If not used, connect to GND. |
| JP5-POS3 and GND: | Non-inverting input of opamp 3 and GND. Half the voltage of Vs is applied at POS3 in this EVM. If opamp 3 is not used, connect POS3 to GND. |
| JP6-POS2 and GND: | Non-inverting input of opamp 2 and GND. If opamp 2 is not used, connect POS2 to GND. |
| JP7-NEG2 and OUT2: | Inverting input and the output voltage of opamp 2. If opamp 2 is not used, connect OUT2 to NEG2. |
| JP8-NEG1 and OUT1: | Inverting input and the output voltage of opamp 1. If opamp 1 is not used, connect OUT1 to NEG1. |
| JP9-POS1 and GND: | Non-inverting input of the opamp 1 and GND. If opamp 1 is not used, connect POS1 to GND. |

2.2 Recommended Test Setup

Connect a power supply rated at 5 A or more to provide 5 V \pm 5% to J4 and J3. Do not exceed 6 V on J4. Operation at an input voltage down to 2.5 V is possible, but maximum output-current levels decrease. In order to avoid voltage drop through the input power supply line, connect heavy gauge, twisted-pair wire to J4 and J3. The output voltages can be monitored by voltmeters and/or an oscilloscope with standard high impedance voltage probes.

Before enabling this IC by connecting the EN pin to VIN pin at JP1, the user must ensure jumpers JP2 – JP9 are in their default positions. When the EN pin is connected to the VIN pin at JP1, the boost converter (V_S) and negative charge pump (VGL) start up with the delay ADLY. The positive charge pump (VGH) starts up with the delay GDLY from EN-high if CTRL = high.

The output voltages reach their respective regulation voltages per [Table 1](#) after the appropriate soft-start times and relative delays. Resistive or electronic loads can be attached to output J6 for V_S , and only resistive loads can be attached to outputs J2 for VGL and J8 for VGH. Exceeding an output load specified in [Table 1](#) results in the output voltage falling out of regulation.

2.3 Test Results

Test results using the TPS65160EVM-233 are shown in [Figure 1](#).

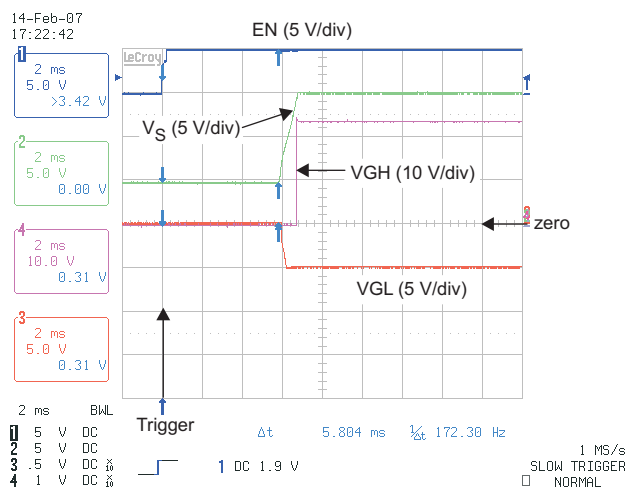


Figure 1. Startup Waveform

3 Board Layout

This chapter provides board layout recommendations as well as pictures of the EVM board layers.

3.1 Board Layout Recommendations

For complete information regarding PC-board layout, please refer to the TPS65165 Data Sheet, literature number [SLVS723](#). An excerpt from that document follows:

1. Place the power components outlined in bold first on the PCB.
2. Rout the traces outlined in bold with wide PCB traces
3. Place a 1- μF bypass capacitor directly from the Vin pin to GND since this is the supply pin for internal circuits.
4. Place a 1- μF bypass capacitor directly from the SUP pin to GND since this is the supply pin for internal circuits.
5. Use a short and wide trace to connect the SUP pin to the output of the boost converter Vs.
6. Place the 220-nF reference capacitor directly from REF to AGND close to the IC pins.
7. The feedback resistor for the negative charge pump between FBN and REF needs to be $>40\text{k}\Omega$.
8. Use short traces for the charge pump drive pin (DRVN) of VGL because the traces carry switching waveforms.
9. Place the flying capacitors as close as possible to the C1P, C1N and C2P, C2N pin.
10. Solder the Power Pad of the QFN package to GND and use thermal vias to lower the thermal resistance

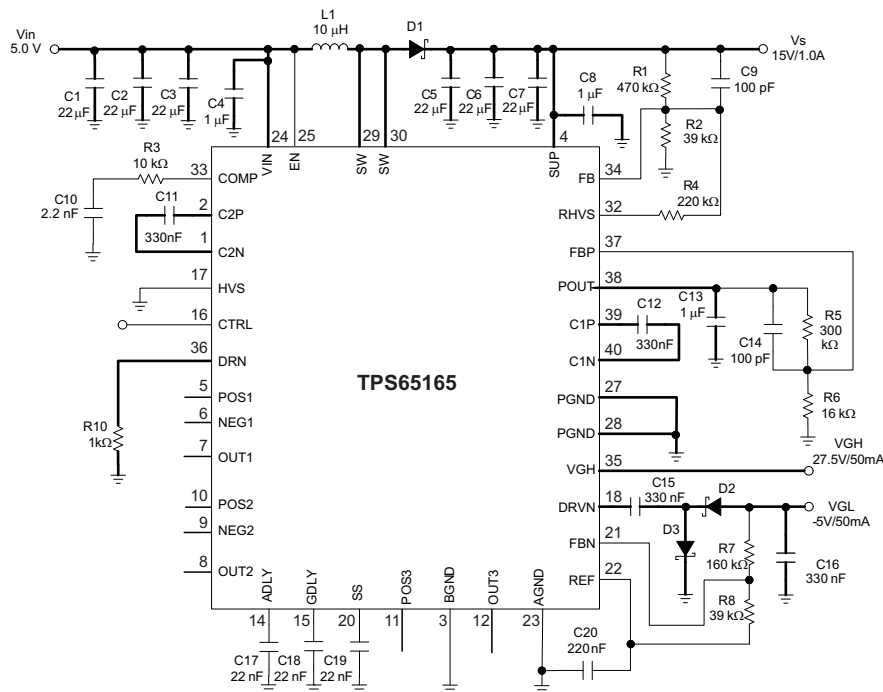


Figure 2. Layout Recommendation

3.2 Board Layers

The following pages show the top assembly, top and bottom layers of the TPS65165EVM-233.

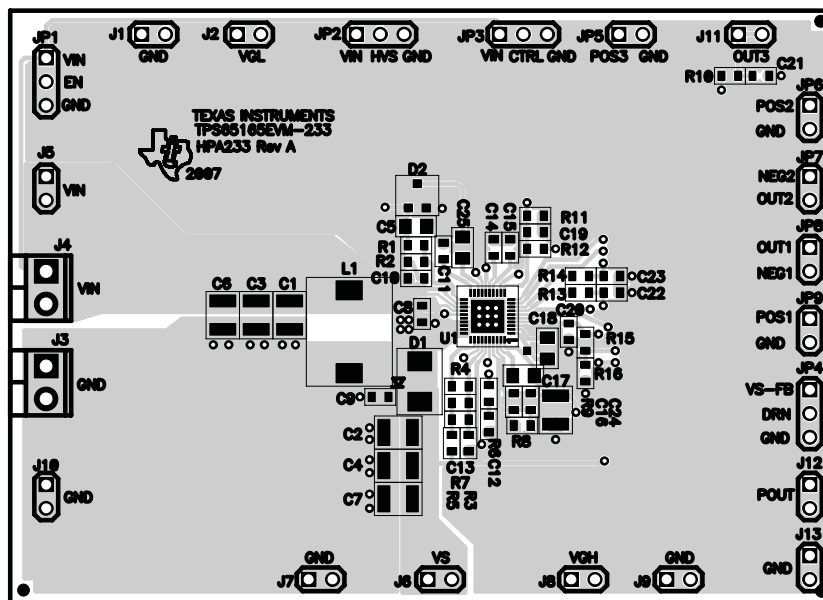


Figure 3. Top Assembly

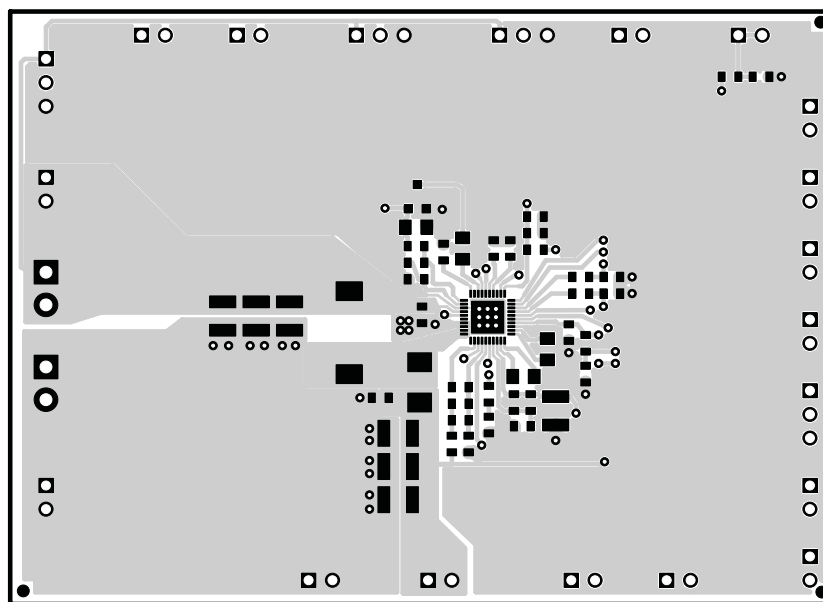


Figure 4. Top Layer

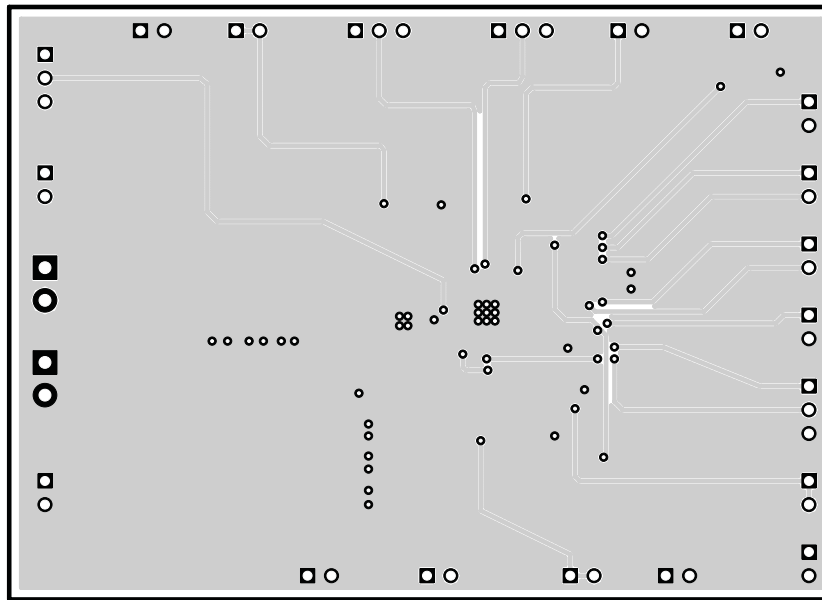


Figure 5. Bottom Layer

4 Schematic and Bill of Materials

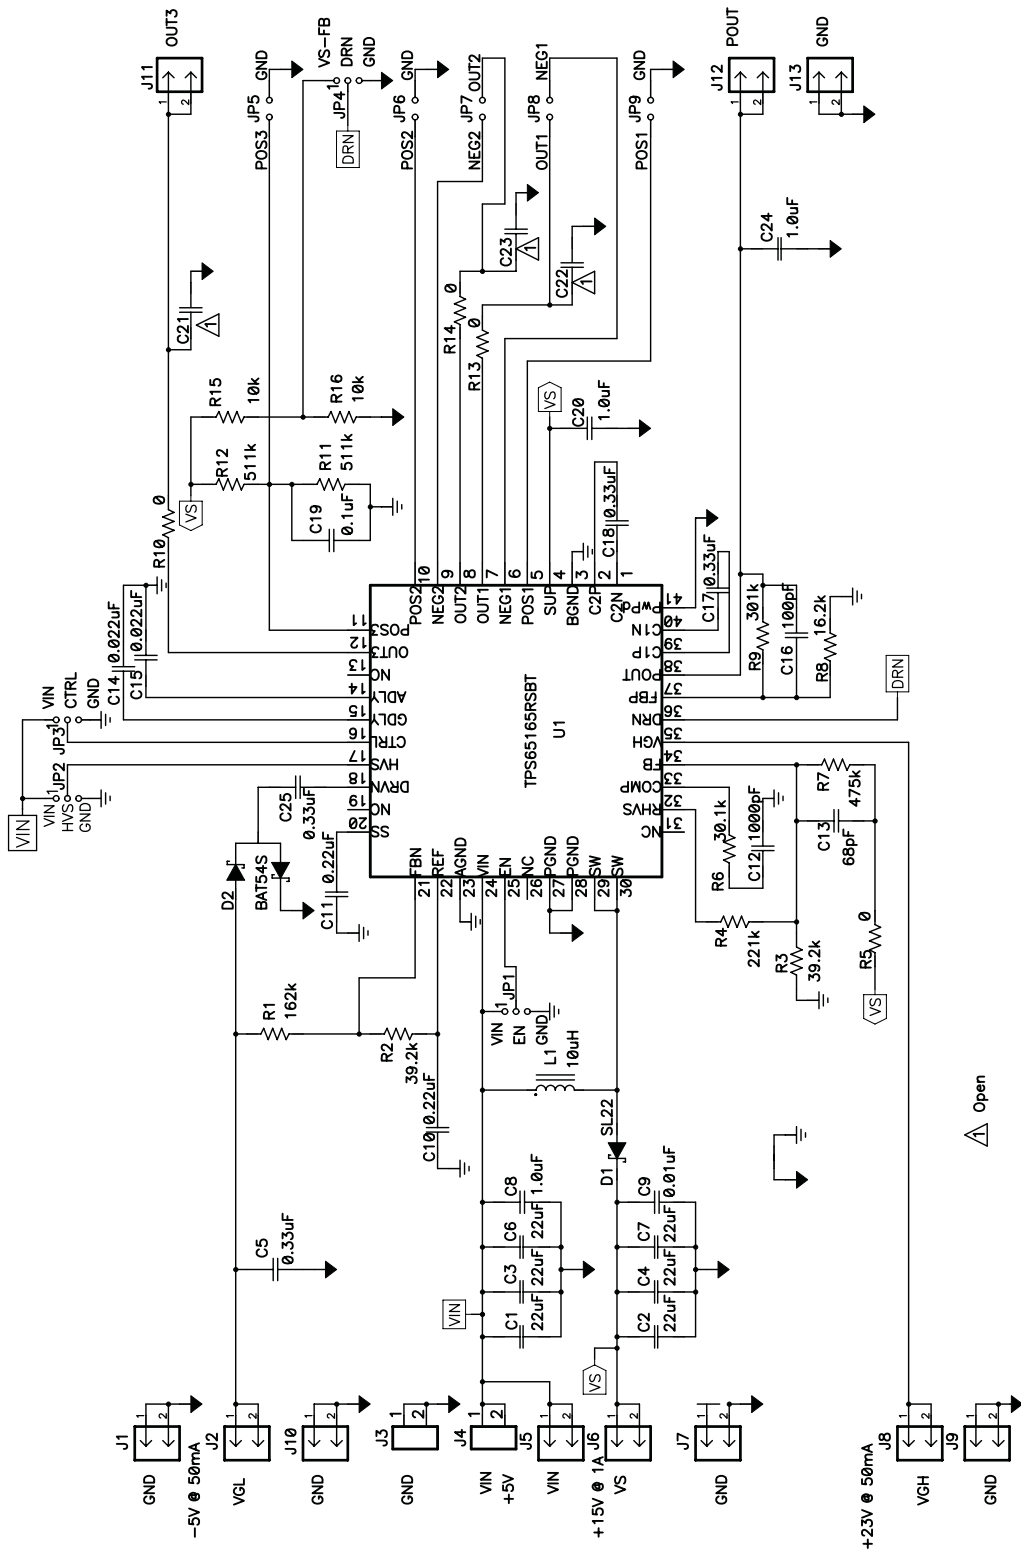


Table 3. Bill of Materials

| Count | RefDes | Value | Description | Size | Part Number | MFR |
|-------|-------------------|-----------------|--|----------------------|--------------------|-----------|
| 6 | C1–C4, C6, C7 | 22 μ F | Capacitor, Ceramic, 25V, X5R, 20% | 1210 | ECJ-4YB1E226M | Panasonic |
| 2 | C10, C11 | 0.22 μ F | Capacitor, Ceramic, 25V, X5R, 10% | 0603 | 06033D224KAT2A | AVX |
| 1 | C12 | 1000 pF | Capacitor, Ceramic, 50V, C0G, 5% | 0603 | C1608C0G1H102J | TDK |
| 1 | C13 | 68 pF | Capacitor, Ceramic, 50V, C0G, 5% | 0603 | C1608C0G1H680J | TDK |
| 2 | C14, C15 | 0.022 μ F | Capacitor, Ceramic, 50V, X7R, 10% | 0603 | C1608X7R1H223K | TDK |
| 1 | C16 | 100 pF | Capacitor, Ceramic, 50V, C0G, 5% | 0603 | C1608C0G1H101J | TDK |
| 1 | C19 | 0.1 μ F | Capacitor, Ceramic, 50V, X7R, 10% | 0603 | C16088X7R1H104K | TDK |
| 2 | C20, C8 | 1.0 μ F | Capacitor, Ceramic, 25V, X5R, 10% | 0603 | GRM188R61E105KA12D | Murata |
| 0 | C21–C23 | Open | Capacitor, Ceramic | 0603 | | |
| 1 | C24 | 1.0 μ F | Capacitor, Ceramic, 50V, X7R, 10% | 1210 | C3225X7R1H105K | TDK |
| 4 | C5, C17, C18, C25 | 0.33 μ F | Capacitor, Ceramic, 50V, X7R, 10% | 0805 | GRM219R71H333KA01D | Murata |
| 1 | C9 | 0.01 μ F | Capacitor, Ceramic, 50V, X7R, 10% | 0603 | C1608X7R1H103K | TDK |
| 1 | D1 | | Diode, Schottky Rectifier, 2A, 20 V | DO-214AA | SL22 | Vishay |
| 1 | D2 | | Diode, Dual Schottky, 200mA, 30V | SOT23 | BAT54S | Zetex |
| 11 | J1, J2, J5–J13 | | Header, 2 pin, 100mil spacing, (36-pin strip) | 0.100 \times 2 | PTC36SAAN | Sullins |
| 2 | J3, J4 | | Terminal Block, 2 pin, 6A, 3.5 mm | 0.27 \times 0.25 | ED1514 | OST |
| 4 | JP1–JP4 | | Header, 3 pin, 100mil spacing, (36-pin strip) | 0.100 \times 3 | PTC36SAAN | Sullins |
| 5 | JP5–JP9 | | Header, 2 pin, 100mil spacing, (36-pin strip) | 0.100 \times 2 | PTC36SAAN | Sullins |
| 1 | L1 | 10 μ H | Inductor, SMT, 4.3A, 44 m Ω | 0.327 \times 0.327 | CDRH8D43HPNP-100NC | Sumida |
| 1 | R1 | 162 k Ω | Resistor, Chip, 1/16W, 1% | 0603 | Std | Std |
| 2 | R11, R12 | 511 k Ω | Resistor, Chip, 1/16W, 1% | 0603 | Std | Std |
| 2 | R15, R16 | 10 k Ω | Resistor, Chip, 1/16W, 1% | 0603 | Std | Std |
| 2 | R2, R3 | 39.2 k Ω | Resistor, Chip, 1/16W, 1% | 0603 | Std | Std |
| 1 | R4 | 221 k Ω | Resistor, Chip, 1/16W, 1% | 0603 | Std | Std |
| 4 | R5, R10, R13, R14 | 0 Ω | Resistor, Chip, 1/16W, 1% | 0603 | Std | Std |
| 1 | R6 | 30.1 k Ω | Resistor, Chip, 1/16W, 1% | 0603 | Std | Std |
| 1 | R7 | 475 k Ω | Resistor, Chip, 1/16W, 1% | 0603 | Std | Std |
| 1 | R8 | 16.2 k Ω | Resistor, Chip, 1/16W, 1% | 0603 | Std | Std |
| 1 | R9 | 301 k Ω | Resistor, Chip, 1/16W, 1% | 0603 | Std | Std |
| 1 | U1 | | IC, Compact LCD bias with high-speed Amplifier for TV and Monitor TFT-LCD panels | QFN-40 | TPS65165RSBT | TI |
| 1 | – | | PCB, 3.45 in \times 2.5 in \times 0.062 in | | HPA233 | Any |
| 9 | – | | Shunt, 100mil, black | 0.100 | 929950-00 | 3M |

EVM WARNINGS AND RESTRICTIONS

It is important to operate this EVM within the input voltage range of 4.5 V to 5.5 V and the output voltage range of 14.7 V to 15.3 V (Vs).

Exceeding the specified input range may cause unexpected operation and/or irreversible damage to the EVM. If there are questions concerning the input range, please contact a TI field representative prior to connecting the input power.

Applying loads outside of the specified output range may result in unintended operation and/or possible permanent damage to the EVM. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative.

During normal operation, some circuit components may have case temperatures greater than 85°C. The EVM is designed to operate properly with certain components above 85°C as long as the input and output ranges are maintained. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors. These types of devices can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during operation, please be aware that these devices may be very warm to the touch.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2007, Texas Instruments Incorporated

EVALUATION BOARD/KIT IMPORTANT NOTICE

Texas Instruments (TI) provides the enclosed product(s) under the following conditions:

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. Persons handling the product(s) must have electronics training and observe good engineering practice standards. As such, the goods being provided are not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards. This evaluation board/kit does not fall within the scope of the European Union directives regarding electromagnetic compatibility, restricted substances (RoHS), recycling (WEEE), FCC, CE or UL, and therefore may not meet the technical requirements of these directives or other related directives.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. **THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.**

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

TI currently deals with a variety of customers for products, and therefore our arrangement with the user **is not exclusive**.

TI assumes **no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.**

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please contact the TI application engineer or visit www.ti.com/esh.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used.

FCC Warning

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2007, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

| Products | | Applications | |
|-----------------------|--|---------------------|--|
| Amplifiers | amplifier.ti.com | Audio | www.ti.com/audio |
| Data Converters | dataconverter.ti.com | Automotive | www.ti.com/automotive |
| DSP | dsp.ti.com | Broadband | www.ti.com/broadband |
| Interface | interface.ti.com | Digital Control | www.ti.com/digitalcontrol |
| Logic | logic.ti.com | Military | www.ti.com/military |
| Power Mgmt | power.ti.com | Optical Networking | www.ti.com/opticalnetwork |
| Microcontrollers | microcontroller.ti.com | Security | www.ti.com/security |
| RFID | www.ti-rfid.com | Telephony | www.ti.com/telephony |
| Low Power Wireless | www.ti.com/lpw | Video & Imaging | www.ti.com/video |
| | | Wireless | www.ti.com/wireless |

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2007, Texas Instruments Incorporated