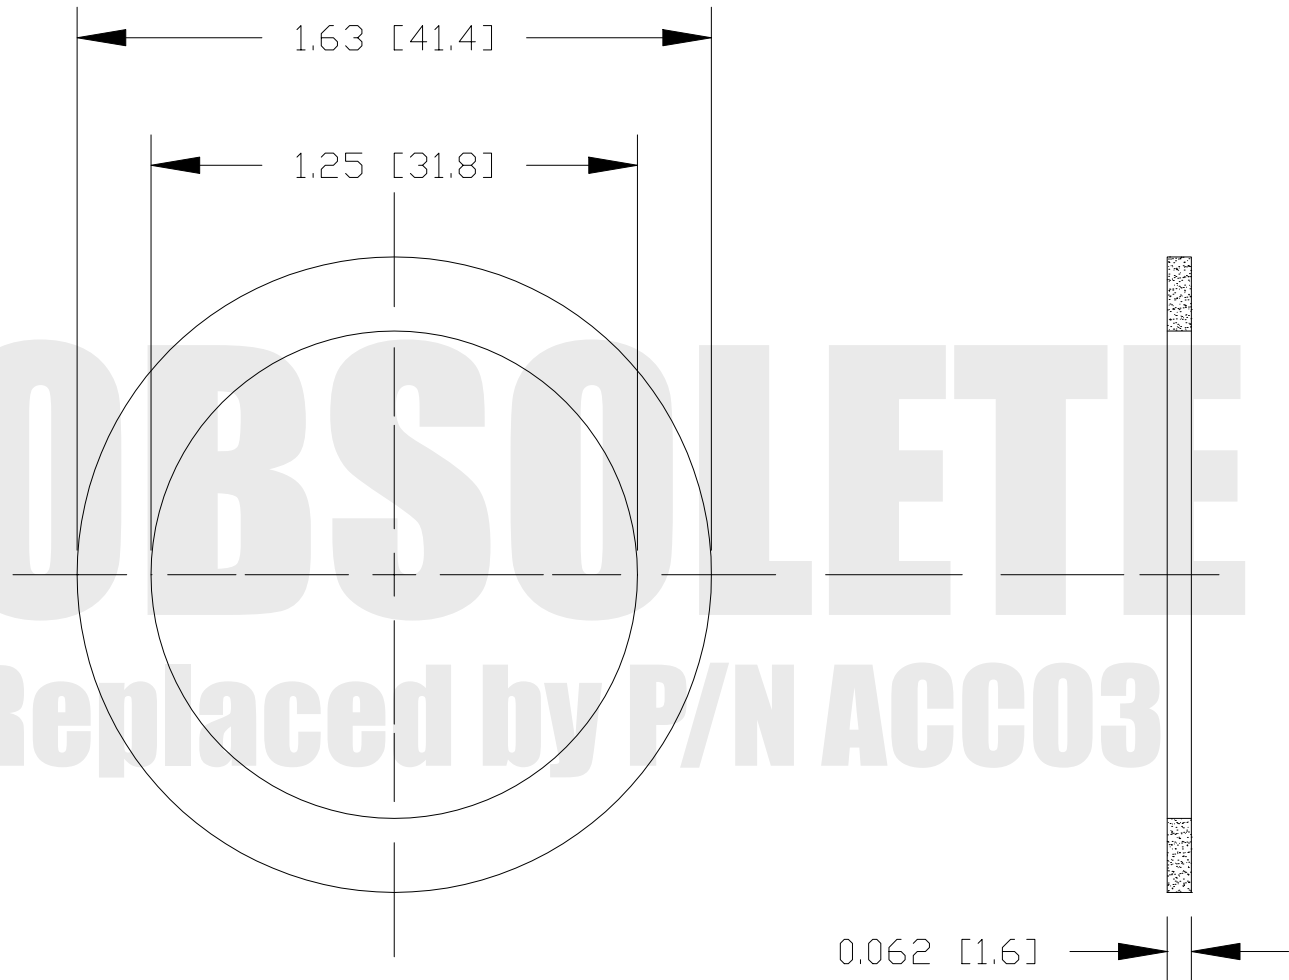


Neoprene Gasket (Obsolete- Replace by P/N ACC03)

Helps seal panel hole to achieve NEMA requirements

**Assembly Procedure**

Remove knurled nut and assemble SG1 gasket onto threaded neck of classic Sonalert[®]. Place threaded neck through panel hole and secure with mounting nut. Hand tighten only.

Material: Neoprene