

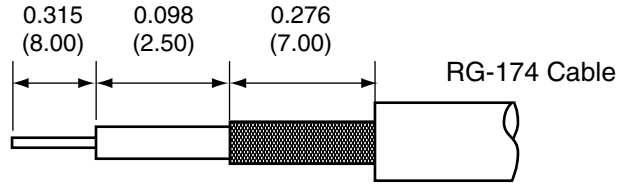


1		
Description	Material	Finish
Body	Brass	Nickel
Socket	Brass	Gold
Crimp Ring	Brass	Nickel
Insulation	Teflon	N/A

RECOMMENDED CABLE STRIPPING DIMENSIONS

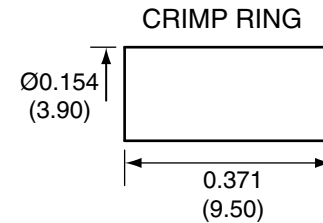


SIDE VIEW

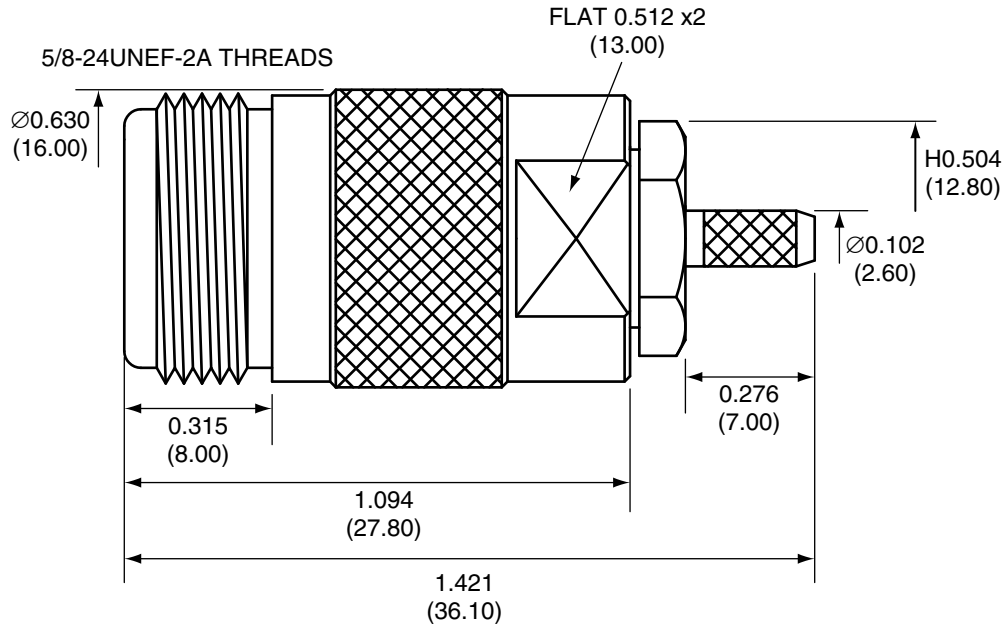

CONN011 ASSEMBLY INSTRUCTIONS

1. Insert the cable center conductor and insulation into the base
2. Solder the socket to the center conductor.
3. Wrap the braid around the tail of the body and crimp the ring with a hex crimp tool.
4. Put the socket through the insulator.
5. Screw the base into the top.

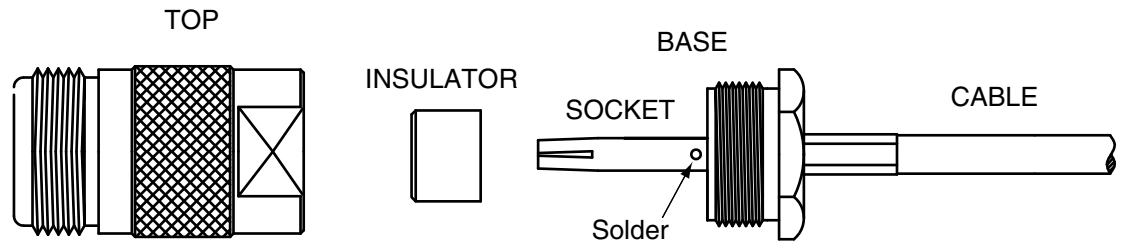

Title		N FEMALE CABLE END CRIMP FOR RG174 CABLE		CONNECTOR CITY 159 ORT LANE MERLIN, OR 97532 PH (541)-471-6256 FAX (541)-471-6251	
Part No.	CONN011	Revision:	1.0		
Dimensions:	INCHES (mm)	Date:	2/20/2008	Sheet 1 of 1	

CONNECTOR CITY
THE VALUE OF CONNECTIONS