



1		
Description	Material	Finish
Body	Brass	Gold
Socket	BE CU	Gold
Insulation	Teflon	Teflon
Crimp Ring	Brass	Gold
Snaps	BE CU	Gold
Spacer	Teflon	Teflon
Support	Brass	Gold

SIDE VIEW

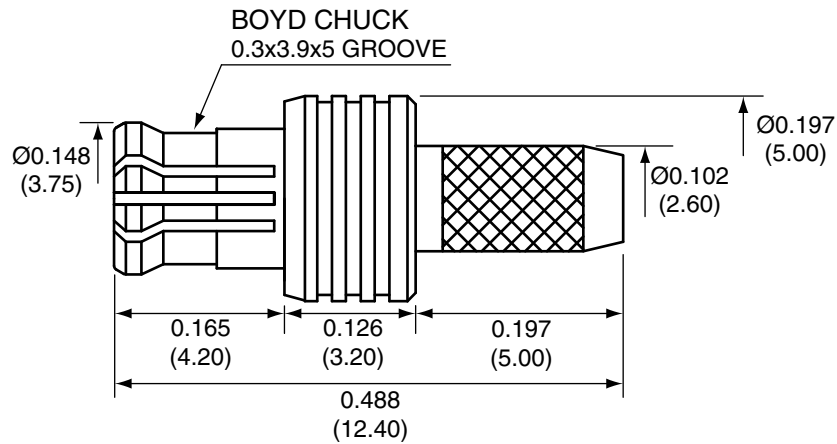


SOCKET

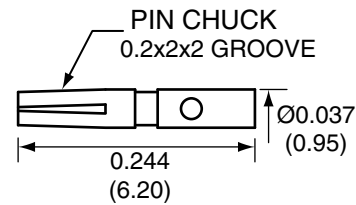


SPACER



SUPPORT



RECOMMENDED CABLE STRIPPING DIMENSIONS

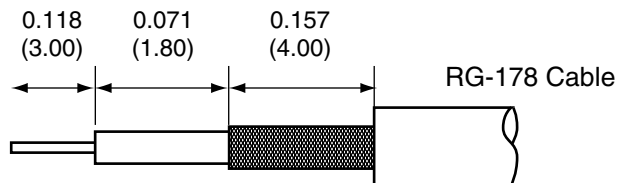

CONREVMCX007-R178 ASSEMBLY INSTRUCTIONS

1. Strip the cable to the recommended dimensions.
2. Solder the support onto the braid.
3. Place the spacer onto the center conductor.
4. Solder or crimp the socket onto the center conductor.
5. Insert the socket, center conductor, spacer, and support into the body until the socket snaps in.
6. Crimp the tail of the body onto the support with a hex crimp tool.

Title RP-MCX MALE CABLE END CRIMP FOR RG178 CABLE

Part No. CONREVMCX007-R178 Revision: 1.0

Dimensions: INCHES (mm) Date: 1/19/2007

CONNECTOR CITY
159 ORT LANE
MERLIN, OR 97532
PH (541)-471-6256
FAX (541)-471-6251

Sheet 1 of 1

CONNECTOR CITY
THE VALUE OF CONNECTIONS