

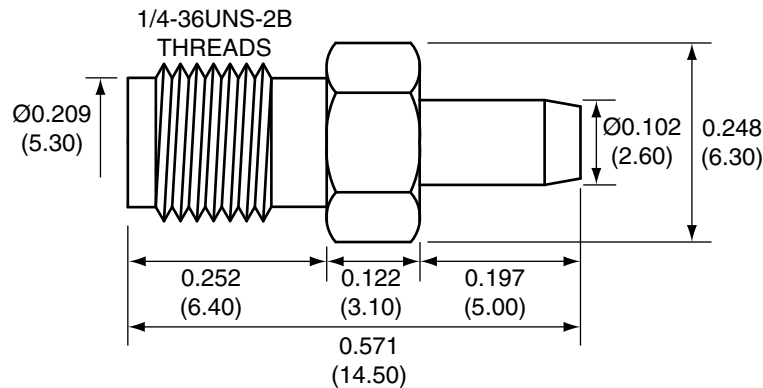
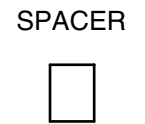


1		
Description	Material	Finish
Body	Brass	Nickel
Socket	BE CU	Gold
Insulation	Teflon	Teflon
Support	Brass	Gold
Insulation	Teflon	Teflon


SIDE VIEW

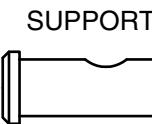

SOCKET

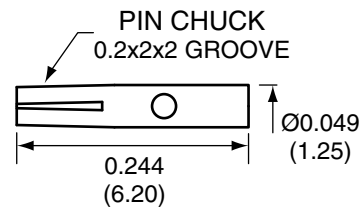

RECOMMENDED CABLE STRIPPING DIMENSIONS

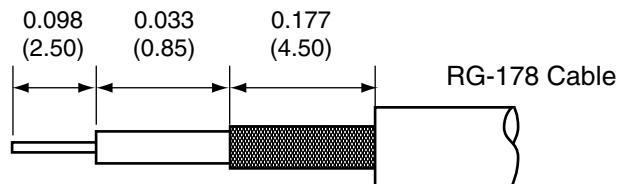

CONSMA011-R178 ASSEMBLY INSTRUCTIONS

1. Strip the cable to the recommended dimensions.
2. Solder the support onto the braid.
3. Place the spacer onto the center conductor.
4. Solder or crimp the socket onto the center conductor.
5. Insert the socket, center conductor, spacer, and support into the body until the top of the socket is even with the white insulation in the body.
6. Crimp the tail of the body onto the support with a hex crimp tool.

Title		SMA FEMALE CABLE END CRIMP FOR RG178 CABLE		CONNECTOR CITY 159 ORT LANE MERLIN, OR 97532 PH (541)-471-6256 FAX (541)-471-6251	
Part No.	CONSMA011-R178	Revision:	1.0		
Dimensions:	INCHES (mm)	Date:	6/2/2006	Sheet 1 of 1	

CONNECTOR CITY
THE VALUE OF CONNECTIONS