


SPECIAL INSTRUCTIONS:

- 1. TEST SWITCH PRIOR TO WIRING.
- 2. CUT AND STRIP (2) 20" WIRES -22 AWG YELLOW AND RED.
- 3. ATTACH WIRES TO TERMINALS (COLORS AS SHOWN)
- 4. ATTACH SHRINK TUBING.

SWITCH P/N: 100 SP-1 TS B1 M1 Q E
(T111083)

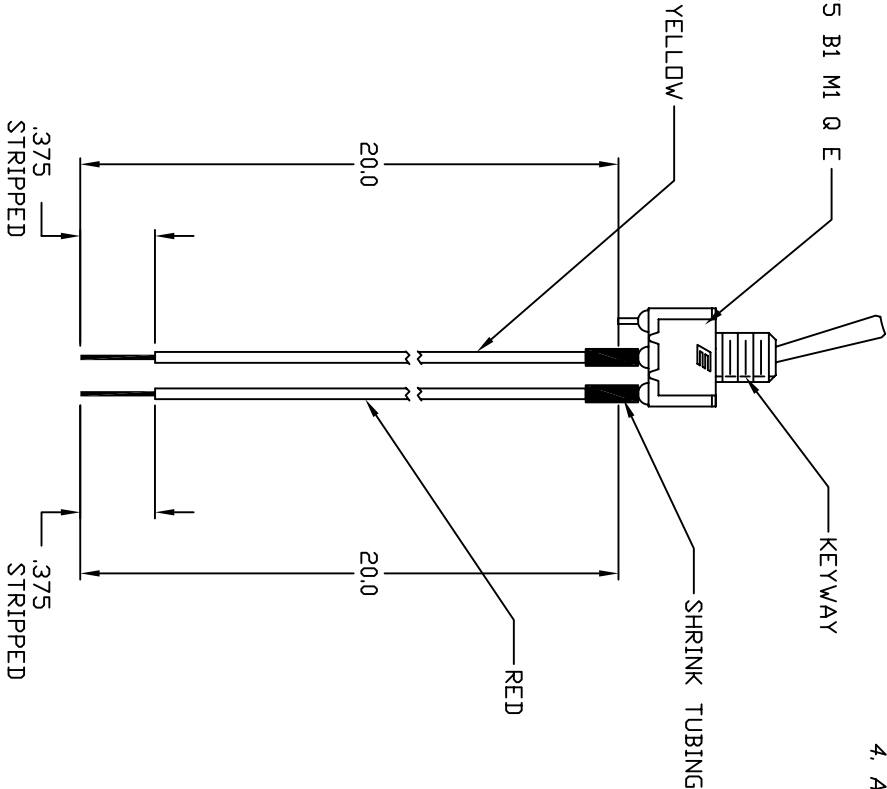

QUALITY CONTROL INSTRUCTIONS:

- *TEST SWITCH PRIOR TO WIRING.
- *CHECK SHRINK TUBING.
- *CHECK DIMENSIONS SHOWN.

NOTES:

1. ALL DIMENSIONS IN INCHES

--	--	--	--

A	RELEASED FOR PRODUCTION		
REV.	DESCRIPTION	DATE	CHKD
THE INFORMATION CONTAINED IN THIS DOCUMENT IS PROPRIETARY TO E-SWITCH AND IS NOT TO BE COPIED OR TRANSFERRED			

TOLERANCES	
0.00	±.015
0.000	±.010

TITLE				
100 SP-1 TS B1 M1 Q E w/Wire Assembly				
SCALE	DATE	DR	DWG	REV
1:1	4/9/97	MM	T111043	A

E-SWITCH®