



SLUS845-JUNE 2008 www.ti.com

HIGH-FREQUENCY MULTIPHASE CONTROLLER


FEATURES

- **Qualified for Automotive Applications**
- Two-, Three-, or Four-Phase Operation
- 5-V to 15-V Operating Range
- **Programmable Switching Frequency Up to** 1-MHz/Phase
- **Current Mode Control With Forced Current** Sharing (1)
- 1% Internal 0.7-V Reference
- **Resistive Divider Set Output Voltage**
- **True Remote Sensing Differential Amplifier**
- **Resistive or DCR Current Sensing**
- **Current Sense Fault Protection**
- **Programmable Load Line**
- Compatible with UCC37222 Predictive Gate Drive™ Technology Drivers
- 24-Pin Space-Saving TSSOP Package
- **Binary Outputs**
- Patent pending

APPLICATIONS

- **Internet Servers**
- **Network Equipment**
- **Telecommunications Equipment**
- **DC Power Distributed Systems**

PW PACKAGE (TOP VIEW)

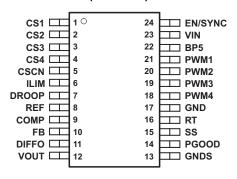

DESCRIPTION

The TPS40090 is a two-, three-, or four-phase programmable synchronous buck controller that is optimized for low-voltage, high-current applications powered by a 5-V to 15-V distributed supply. A multi-phase converter offers several advantages over a single power stage including lower current ripple on the input and output capacitors. faster transient response to load steps, improved power handling capabilities, and higher system efficiency.

Each phase can be operated at a switching frequency up to 1-MHz, resulting in an effective ripple frequency of up to 4-MHz at the input and the output in a four-phase application. A two-phase design operates 180° out of phase, a three-phase design operates 120° out of phase, and a four-phase design operates 90° out of phase, as shown in Figure 1.

The number of phases is programmed by connecting the deactivated phase PWM output to the output of the internal 5-V LDO. In two-phase operation the even phase outputs should be deactivated.

The TPS40090 uses fixed frequency, peak current mode control with forced phase current balancing. When compared to voltage mode control, current mode results in a simplified feedback network and reduced input line sensitivity. Phase current is sensed by using either current sense resistors installed in series with output inductors or, for improved efficiency, by using the DCR (direct current resistance) of the filter inductors. The latter method involves generation of a current proportional signal with an R-C circuit (shown in Figure 10).

The R-C values are selected by matching the time constants of the R-C circuit and the inductor; R-C = L/DCR. With either current sense method, the current signal is amplified and superimposed on the amplified voltage error signal to provide current mode PWM control.

An output voltage droop can be programmed to improve the transient window and reduce size of the output filter. Other features include a single voltage operation, a true differential sense amplifier, a programmable current limit, soft-start and a power good indicator.

Predictive Gate Drive is a trademark of Texas Instruments.

Please be aware that an important notice concerning availability, standard warranty, and use in critical applications of Texas Instruments semiconductor products and disclaimers thereto appears at the end of this data sheet.

SLUS845-JUNE 2008

INSTRUMENTS

www.ti.com




These devices have limited built-in ESD protection. The leads should be shorted together or the device placed in conductive foam during storage or handling to prevent electrostatic damage to the MOS gates.

ORDERING INFORMATION(1)

T _J	PACK	AGE ⁽²⁾	ORDERABLE PART NUMBER	TOP-SIDE MARKING	
-40°C to 125°C	TSSOP - PW	Reel of 2000	TPS40090QPWRQ1	TPS40090Q	

- (1) For the most current package and ordering information, see the Package Option Addendum at the end of this document, or see the TI web site at www.ti.com.
- (2) Package drawings, thermal data, and symbolization are available at www.ti.com/packaging.

SIMPLIFIED TWO-PHASE APPLICATION DIAGRAM

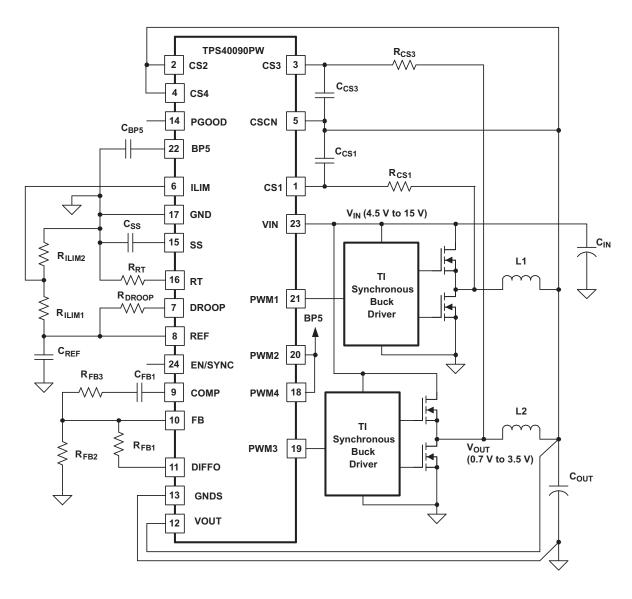



ABSOLUTE MAXIMUM RATING

over operating free-air temperature range unless otherwise noted (1)

V	Input voltage range	EN/SYNC, VIN,	16.5 V
V _{IN}	Input voltage range	CS1, CS2, CS3, CS4, CSCN, DROOP, FB, GNDS, ILIM, VOUT	-0.3 V to 6 V
V _{OUT}	Output voltage range	-0.3 V to 6 V	
TJ	Operating virtual-junction	–40°C to 125°C	
T _{stg}	Storage temperature	−5°C to 150°C	
ESD	Electrostatic discharge pro	1500 V	

⁽¹⁾ Stresses beyond those listed under "absolute maximum ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated under "recommended operating conditions" is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

RECOMMENDED OPERATING CONDITIONS

		MIN	MAX	UNIT
V_{IN}	Input voltage	4.5	15	V
T_{J}	Operating virtual-junction temperature	-40	125	°C

ELECTRICAL CHARACTERISTICS

 $T_J = -40^{\circ} C$ to 125°C, V_{IN} = 12 V, $R_{(RT)}$ = 64.9 k Ω , $T_J = T_A$ (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
INPUT	SUPPLY					
V _{IN}	Operating voltage range, VIN		4.5		15	
V_{IN}	UVLO	Rising V _{IN}	4.25		4.45	V
V_{IN}	UVLO ⁽¹⁾	Falling V _{IN}	4.1		4.35	
I _{IN}	Shutdown current, VIN			2	10	μΑ
I _{IN}	Quiescent current switching	Four channels, 400 kHz each, no load		4	6	mA
OSCIL	LATOR/SYNCHRONIZATION		·			
	Phase frequency accuracy	Four channels, $R_{RT} = 64.9 \text{ k}\Omega$	350	415	455	
	Phase frequency set range ⁽¹⁾	Four channels	100		1200	kHz
	Synchronization frequency range ⁽¹⁾	Four channels	800		9600	
	Synchronization input threshold ⁽¹⁾	Four channels		V _{BP5} /2		V
PWM			·			
	Manipular duty avalages absocial	4-phase operation		87.5		%
	Maximum duty cycle per channel	2- and 3-phase operation		83.3		%
	Minimum duty cycle per channel (1)				0	%
	Minimum controllable on-time ⁽¹⁾			50	100	ns
ERRO	R AMPLIFIER					
	Feedback input voltage		0.690	0.700	0.707	V
	Feedback input bias current	V _{FB} = 0.7 V		25	150	nA
V_{OH}	High-level output voltage	I _{COMP} = -1 mA	2.5	2.9		M
V_{OL}	low-level output voltage	I _{COMP} = 1 mA		0.5	0.8	V
G_{BW}	Gain bandwidth ⁽¹⁾			5		MHz
A_{VOL}	Open loop gain ⁽¹⁾			90		dB
	START					
I _{SS}	Soft-start source current		3.5	5	6	μΑ
V _{SS}	Soft-start clamp voltage		0.95	1.00	1.05	V

(1) Specified by design

SLUS845-JUNE 2008 www.ti.com

ELECTRICAL CHARACTERISTICS (continued)

 $T_J = -40^{\circ} C$ to 125°C, V_{IN} = 12 V, $R_{(RT)}$ = 64.9 k $\Omega,\ T_J = T_A$ (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
ENABL	E					
	Enable threshold voltage		0.8	2	2.5	V
	Enable voltage capability ⁽²⁾				$V_{IN(max)}$	V
PWM O	UTPUT					
	PWM pullup resistance	I _{OH} = 5 mA		27	45	Ω
	PWM pulldown resistance	I _{OL} = 10 mA		27	45	12
5-V RE	GULATOR		<u> </u>			
V _{OUT}	Output voltage	External I _{LOAD} = 2 mA on BP5	4.8	5	5.2	V
	Pass device voltage drop	V _{IN} = 4.5 V, No external load on BP5			200	mV
	Short circuit current		10		30	mA
CURRE	NT SENSE AMPLIFIER					
	Gain transfer	100 mV ≤ V _(CS) ≤ 100 mV, V _{CSRTN} = 1.5 V	4.7	5.4	5.9	V/V
	Gain variance between phases	V _{CS} = 100 mV	-5		5	%
	Input offset variance at zero current	V _{CS} = 0 V	-7	0	8	mV
	Input common mode (2)		0		4	V
	Bandwidth ⁽²⁾		18			MHz
DIFFER	ENTIAL AMPLIFIER		<u> </u>			
	Gain			1		V/V
	Gain tolerance	V _{OUT} 4 V vs 0.7 V, V _{GNDS} = 0 V	-0.5		0.5	%
CMRR	Common mode rejection ratio ⁽²⁾	0.7 V ≤ V _{OUT} ≤ 4 V	60			dB
	Bandwidth (2)		5			MHz
RAMP			<u> </u>			
	Ramp amplitude (2)		0.4	0.5	0.6	V
POWER	R GOOD					
	PGOOD high threshold	wrt V _{REF}	10		14	%
	PGOOD low threshold	wrt V _{REF}	-14		-10	%
V_{OL}	Low-level output voltage	I _{PGOOD} = 4 mA		0.35	0.60	V
I _{lkg}	PGOOD output leakage	V _{PGOOD} = 5 V		50	80	μΑ
OUTPU	T OVERVOLTAGE/UNDERVOLTAGE	FAULT	<u> </u>			
V _{OV}	Overvoltage threshold voltage	V _{FBK} relative to V _{REF}	15		19	%
V_{UV}	Undervoltage threshold voltage	V _{FBK} relative to V _{REF}	-18		-14	%
LOAD L	INE PROGRAMMING		•			
I _{DROOP}	Pulldown current on DROOP	4-phase, V _{CS} = 100 mV		40		μΑ

⁽²⁾ Specified by design




Terminal Functions

TERMINAL NAME NO.			DESCRIPTION				
		1/0					
BP5	22	0	Output of an internal 5-V regulator. A 4.7- μ F capacitor should be connected from this pin to ground For 5-V applications, this pin should be connected to VDD.				
COMP	9	0	Output of the error amplifier. The voltage at this pin determines the duty cycle for the PWM.				
CS1	1	1					
CS2	2	1	Used to sense the inductor current in the phases. Inductor current can be sensed with an external current sense resistor or by using an external circuit and the inductor's DC resistance. They are also				
CS3	3	I	used for overcurrent protection and forced current sharing between the phases.				
CS4	4	I					
CSCN	5	I	Common point of current sense resistors or filter inductors				
DIFFO	11	0	Output of the differential amplifier. The voltage at this pin represents the true output voltage without drops that result from high current in the PCB traces				
DROOP	7	I	Used to program droop function. A resistor between this pin and the REF pin sets the desired droop value.				
EN/SYNC	24	I	A logic high signal on this input enables the controller operation. A pulsing signal to this pin synchronizes the main oscillator to the rising edge of an external clock source. These pulses must be of higher frequency than the free running frequency of the main oscillator set by the resistor from the RT pin.				
FB	10	I	Inverting input of the error amplifier. In closed loop operation, the voltage at this pin is the internal reference level of 700 mV. This pin is also used for the PGOOD and OVP comparators.				
GND	17		Ground connection to the device.				
GNDS	13	I	Inverting input of the differential amplifier. This pin should be connected to ground at the point of load.				
ILIM	6	1	Used to set the cycle-by-cycle current limit threshold. If ILIM threshold is reached, the PWM cycle is terminated and the converter delivers limited current to the output. Under these conditions the undervoltage threshold is reached eventually and the controller enters the hiccup mode. The controller stays in hiccup mode for seven consecutive cycles. At the eighth cycle the controller attempts a full start-up sequence.				
PGOOD	14	0	Power good indicator of the output voltage. This open-drain output connects to the supply via an external resistor.				
PWM1	21	0	Dhoos shifted DWM outputs which control the outputs drivers. The high output signal commands of				
PWM2	PWM2 20 O		Phase shifted PWM outputs which control the external drivers. The high output signal commands a PWM cycle. The low output signal commands controlled conduction of the synchronous rectifiers.				
PWM3 19		0	These pins are also used to program various operating modes as follows: for three-phase mode,				
PWM4	18	0	PWM4 is connected to 5 V; for two-phase mode, PWM2 and PWM4 are connected to 5 V.				
REF	8	0	Output of an internal 0.7-V reference voltage.				
RT	16	I	Connecting a resistor from this pin to ground sets the oscillator frequency.				
VIN	23	I	Power input for the chip. Decoupling of this pin is required.				
VOUT	12	I	Noninverting input of the differential amplifier. This pin should be connected to VOUT at the point of load.				
SS	15	I	Provides user programmable soft-start by means of a capacitor connected to the pin.				

SLUS845-JUNE 2008 www.ti.com



FUNCTIONAL BLOCK DIAGRAM

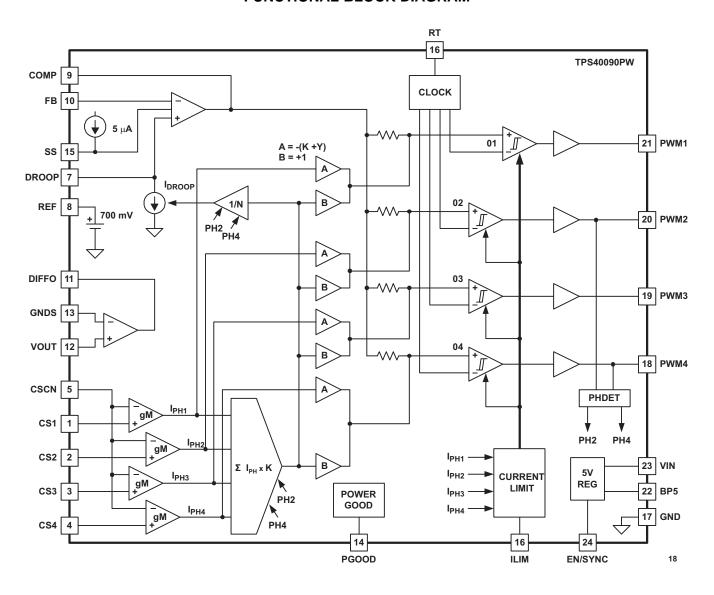

APPLICATION INFORMATION

FUNCTIONAL DESCRIPTION

The TPS40090 is a multiphase, synchronous, peak current mode, buck controller. The controller uses external gate drivers to operate N-channel power MOSFETs. The controller can be configured to operate in a two-, three-, or four-phase power supply.

The controller accepts current feedback signals from either current sense resistors placed in series with the filter inductors or current proportional signals derived from the inductors' DCR.

Other features include an LDO regulator with UVLO to provide single voltage operation, a differential input amplifier for precise output regulation, user programmable operation frequency for design flexibility, external synchronization capability, programmable pulse-by-pulse overcurrent protection, output overvoltage protection, and output undervoltage shutdown.

DIFFERENTIAL AMPLIFIER

The unity gain differential amplifier with high bandwidth allows improved regulation at a user-defined point and eases layout constraints. The output voltage is sensed between the VOUT and GNDS pins. The output voltage programming divider is connected to the output of the amplifier (DIFFO). The differential amplifier can be used only for output voltages lower then 3.3 V.

If there is no need for a differential amplifier, or if the output voltage required is higher than 3.3 V, the differential amplifier can be disabled by connecting the GNDS pin to the BP5 pin. The voltage programming divider in this case should be connected directly to the output of the converter.

CURRENT SENSING AND BALANCING

The controller employs a peak current-mode control scheme, which naturally provides a certain degree of current balancing. With current mode, the level of current feedback should comply with certain guidelines depending on duty factor, known as *slope compensation* to avoid subharmonic instability. This requirement can prohibit achieving a higher degree of phase current balance. To avoid the controversy, a separate current loop that forces phase currents to match is added to the proprietary control scheme. This effectively provides high degree of current sharing independently of properties of controller's small signal response.

High-bandwidth current amplifiers can accept as an input voltage either voltage drop across dedicated precise current-sense resistors, or inductor's DCR voltage derived by an R-C network, or thermally compensated voltage derived from the inductor's DCR. The wide range of current-sense settings eases the cost and complexity constraints and provides performance superior to those found in controllers using low-side MOSFET current sensing.

Product Folder Link(s): TPS40090-Q1

Instruments

SLUS845-JUNE 2008 www.ti.com

SETTING CONTROLLER CONFIGURATION

By default, the controller operates at four-phase configuration. The alternate number of active phases is programmed by connecting unused PWM outputs to BP5. (See Figure 1) For example, for three-phase operation, the unused fourth phase output, PWM4, should be connected to BP5. For two-phase operation, the second, PWM2, and the fourth, PWM4, outputs should be connected to BP5.

POWER UP

Capacitors connected to the BP5 pin and the soft-start pin set the power-up time. When EN is high, the capacitor connected to the BP5 pin gets charged by the internal LDO as shown in Figure 2.

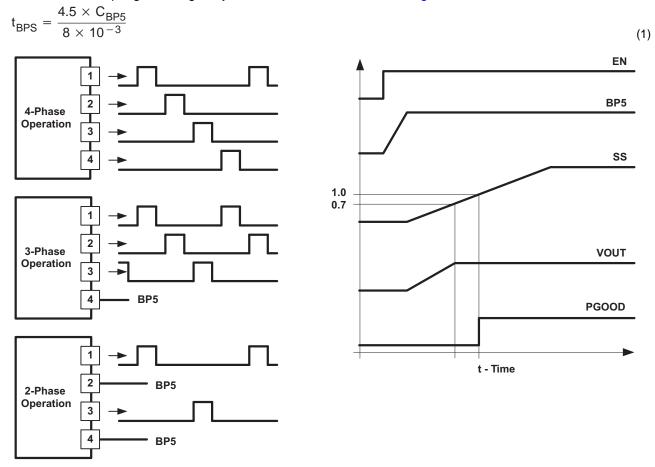


Figure 1. Programming Controller Configuration

Figure 2. Power-Up Waveforms



When the BP5 pin voltage crosses its lower undervoltage threshold and the power-on reset function is cleared, the calibrated current source starts charging the soft start capacitor. The PGOOD pin is held low during the start up. The rising voltage across the capacitor serves as a reference for the error amplifier assuring start-up in a closed loop manner. When the soft start pin voltage reaches the level of the reference voltage $V_{REF} = 0.7 \text{ V}$, the converter's output reaches the regulation point and further rise of the soft start voltage has no effect on the output.

$$t_{SS} = \frac{0.7 \times C_{SS}}{5 \times 10^{-6}} \tag{2}$$

When the soft-start voltage reaches level of 1 V, the power good (PGOOD) function is cleared and reported on the PGOOD pin. Normally, the PGOOD pin goes high at this moment. The time from when SS begins to rise to when PGOOD is reported is:

$$t_{PG} = 1.43 \times T_{SS} \tag{3}$$

OUTPUT VOLTAGE PROGRAMMING

The converter output voltage is programmed by the R1/R2 divider from the output of the differential amplifier. The center point of the divider is connected to the inverting output of the error amplifier (FB), as shown in Figure 5.

$$V_{OUT} = 0.7 \text{ V} \times \left(\frac{\text{R1}}{\text{R2}} + 1\right) \tag{4}$$

CURRENT SENSE FAULT PROTECTION

Multiphase controllers with forced current sharing are inherently sensitive to failure of a current sense component. In the event of such failure, the whole load current can be steered with catastrophic consequences into a single channel where the fault has happened. The dedicated circuit in the TPS40090 controller prevents it from starting up if any current sense pin is open or shorted to ground. The current-sense fault detection circuit is active only during device initialization, and it does not provide protection should a current-sense failure happen during normal operation.

OVERVOLTAGE PROTECTION

If the voltage at the FB pin (V_{FB}) exceeds V_{REF} by more than 16%, the TPS40090 enters into an overvoltage state. In this condition, the output signals from the controller to the external drivers is pulled low, causing the drivers to force all of the upper MOSFETs to the OFF position and all the lower MOSFETs to the ON position. As soon as V_{FB} returns to regulation, the normal operating state resumes.

Copyright © 2008, Texas Instruments Incorporated

Submit Documentation Feedback

SLUS845-JUNE 2008 www.ti.com

OVERCURRENT PROTECTION

The overcurrent function monitors the voltage level separately on each current sense input and compares it to the voltage on the ILIM pin set by a divider from the controller's reference. In case a threshold of $V_{(ILIM)}/2.7$ is exceeded the PWM cycle on the associated phase is terminated. The voltage level on the ILIM pin is determined by the following expression:

$$V_{ILIM} = 2.7 \times I_{PH(max)} \times R_{CS}$$
 (5)

$$I_{PH(max)} = I_{OUT} + \frac{\left(V_{IN} - V_{OUT}\right) \times V_{OUT}}{2 \times L \times f_{SW} \times V_{IN}}$$
(6)

where:

- I_{PH(max)} is a maximum value of the phase current allowed
- R_{CS} is a value of the current sense resistor used

If the overcurrent condition continues, each phase's PWM cycle is terminated by the overcurrent signals. This puts a converter in a constant current mode with the output current programmed by the ILIM voltage. Eventually, the supply and demand equilibrium on the converter output fails and the output voltage declines. When the undervoltage threshold is reached, the converter enters a hiccup mode. The controller is stopped and the output is not regulated any more, the softstart pin function changes. It now serves as a timing capacitor for a fault control circuit. The soft-start pin is periodically charged and discharged by the fault control circuit. After seven hiccup cycles expire, the controller attempts to restore normal operation. If the overload condition is not cleared, the controller stays in the hiccup mode indefinitely. In such conditions, the average current delivered to the load is roughly 1/8 of the set overcurrent value.

UNDERVOLTAGE PROTECTION

If the FB pin voltage falls lower than the undervoltage protection threshold (84.5%), the controller enters the hiccup mode as it is described in the Overcurrent Protection section.

FAULT-FREE OPERATION

If the SS pin voltage is prevented from rising above the 1-V threshold, the controller does not execute nor report most faults and the PGOOD output remains low. Only the overcurrent function and current-sense fault remain active. The overcurrent protection continues to terminate PWM cycle every time when the threshold is exceeded but the hiccup mode is not entered.

10

SETTING THE SWITCHING FREQUENCY

The clock frequency is programmed by the value of the timing resistor connected from the RT pin to ground.

$$R_{RT} = K_{PH} \times (39.2 \times 10^3 \times f_{PH}^{-1.041} - 7)$$
(7)

where:

 K_{PH} is a coefficient that depends on the number of active phases. For two-phase and three-phase configurations, K_{PH} = 1.333. For four-phase configurations, K_{PH} = 1. f_{PH} is a single phase frequency, kHz. The RT resistor value is returned by the last expression in $k\Omega$.

To calculate the output ripple frequency, use the following equation:

$$F_{RPL} = N_{PH} \times f_{PH} \tag{8}$$

where:

N_{PH} is a number of phases used in the converter.

The switching frequency of the controller can be synchronized to an external clock applied to the EN/SYNC pin. The external frequency should be somewhat higher than the free-running clock frequency for synchronization to take place.

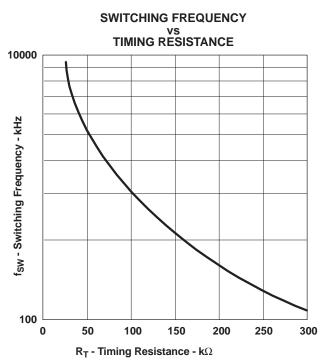


Figure 3.

Copyright © 2008, Texas Instruments Incorporated

SLUS845-JUNE 2008



SETTING THE OUTPUT VOLTAGE DROOP

In many applications, the output voltage of the converter is intentionally allowed to droop as load current increases. This approach (sometimes referred to as active load line programming) allows for better use of the regulation window and reduces the amount of the output capacitors required to handle the same load current step. A resistor from the REF pin to the DROOP pin sets the desired value of the output voltage droop.

$$R_{DROOP} = \frac{2500 \text{ N}_{PH} \times V_{DROOP}}{I_{OUT} \times R_{CS}} \times \frac{V_{REF}}{V_{OUT}} = \frac{2500 \text{ N}_{PH} \times V_{DROOP}}{V_{CS1} + V_{CS2} + V_{CS3} + V_{CS4}} \times \frac{R2}{R1 + R2}$$
(9)

where:

- V_{DROOP} is the value of droop at maximum load current I_{OUT}
- N_{PH} is number of phases
- R_{CS} is the current-sense resistor value
- 2500 Ω is the inversed value of transconductance from the current sense pins to DROOP
- V_{CSx}, are the average voltages on the current sense pins

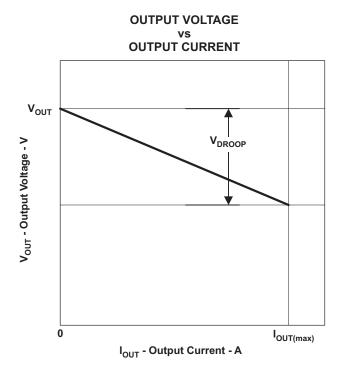


Figure 4.

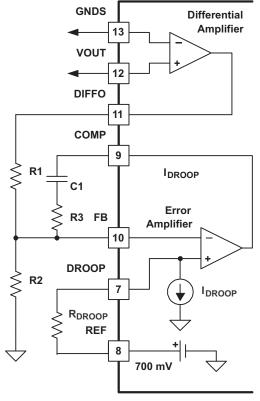


Figure 5.

Submit Documentation Feedback


FEEDBACK LOOP COMPENSATION

The TPS40090 operates in a peak current mode and the converter exhibits a single pole response with ESR zero for which Type II compensation network is usually adequate, as shown in Figure 7.

The following equations show where the load pole and ESR zero calculations are situated.

$$f_{\rm OP} = \frac{1}{2\pi \times R_{\rm OUT} \times C_{\rm OUT}}$$
 $f_{\rm ESRZ} = \frac{1}{2\pi \times R_{\rm ESR} \times C_{\rm OUT}}$ (10)

To achieve desired bandwidth the error amplifier must compensate for modulator gain loss on the crossover frequency and this is facilitated by placing the zero over the load pole. The ESR zero alters the modulator's -1 slope at higher frequencies. To compensate for that alteration, the pole in-error amplifier transfer function should be added at frequency of the ESR zero as shown in Figure 6.

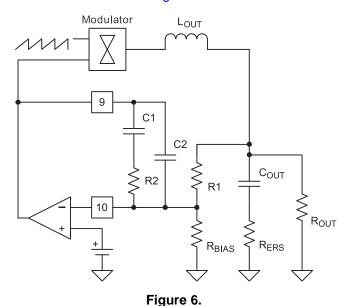

The following equations help in choosing components of the error amplifier compensation network. Fixing the value of the resistor R1 first is recommended as it simplifies further adjustments of the output voltage without altering the compensation network.

R2 = R1 ×
$$10^{\left(\frac{-G_{OMAG}}{20}\right)}$$
; C1 = $\frac{1}{\left(2\pi \times F_{OP} \times R2\right)}$; C2 = $\frac{1}{\left(2\pi \times F_{ESRZ} \times R2\right)}$ (11)


where:

• G_{OMAG} is the control to output gain at desired system crossover frequency.

Introduction of output voltage droop as a measure to reduce amount of filter capacitors changes the transfer function of the modulator as it is shown in the Figure 8.

Copyright © 2008, Texas Instruments Incorporated



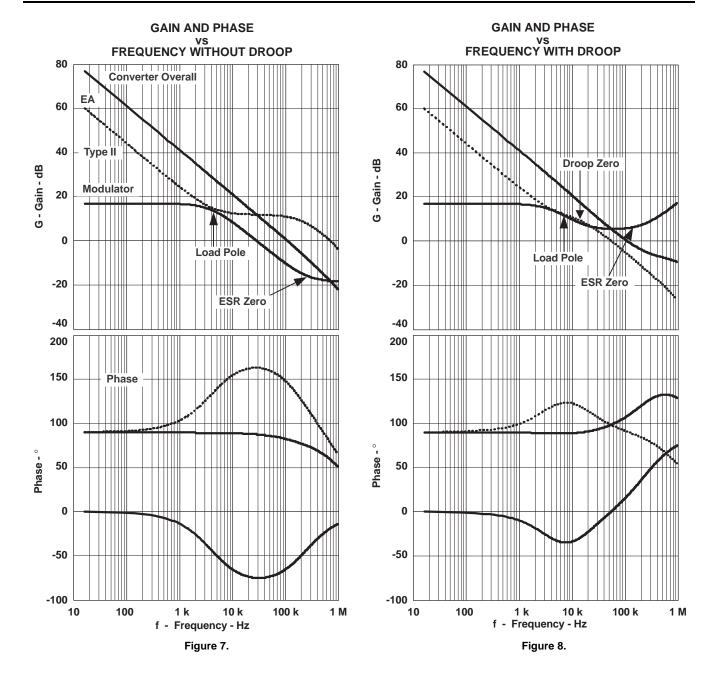

The droop function, as well as the output capacitor ESR, introduces zero on some frequency left of the crossover point.

$$F_{DROOPZ} = \frac{1}{2\pi \left(\frac{V_{DROOP}}{I_{OUT(max)}}\right) \times C_{OUT}}$$
(12)

To compensate for this zero, pole on the same frequency should be added to the error amplifier transfer function. With Type II compensation network a new value for the capacitor C2 is required compared to the case without droop.

$$C2 = \frac{C1}{2\pi \times R2 \times C1 \times (F_{DROOPZ} - 1)}$$
(13)

When attempting to close the feedback loop at frequency that is near the theoretical limit, use the above considerations as a first approximation and perform on bench measurements of closed loop parameters as effects of switching frequency proximity and finite bandwidth of voltage and current amplifiers may substantially alter them as it is shown in Figure 9.

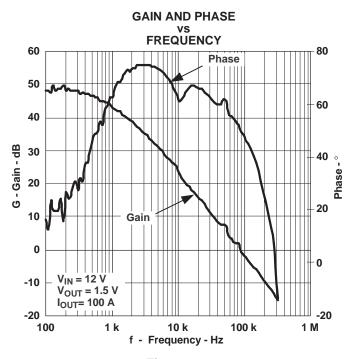


Figure 9.

Copyright © 2008, Texas Instruments Incorporated



THERMAL COMPENSATION OF DCR CURRENT SENSING

Inductor DCR current sensing is a known lossless technique to retrieve a current proportional signal. Equation 14 and Equation 15 show the calculation used to determine the DCR voltage drop for any given frequency. (See Figure 10)

$$V_{DCR} = (V_{IN} - V_{OUT}) \times \frac{DCR}{DCR + \omega \times L}$$
 (14)

$$V_{C} = \left(V_{IN} - V_{OUT}\right) \times \frac{1}{\omega \times C \times \left(R + \frac{1}{\omega \times C}\right)}$$
(15)

Voltage across the capacitor is equal to voltage drop across the inductor DCR, $V_C = V_{DCR}$ when time constant of the inductor and the time constant of the R-C network are equal:

$$V_{C} = \frac{1}{\omega \times C \times \left(R + \frac{1}{\omega \times C}\right)} = \frac{DCR}{DCR + \omega \times L}; \quad \frac{L}{DCR} = R \times C; \quad \tau_{DCRL} = \tau_{RC}$$
(16)

The output signal generated by the network shown in Figure 10 is temperature dependant due to positive thermal coefficient of copper specific resistance as determined using Equation 17. The temperature variation of the inductor coil can exceed 100°C in a practical application leading to approximately 40% variation in the output signal and in turn, respectively move the overcurrent threshold and the load line.

$$K(T) = 1 + 0.0039 \times (T - 25) \tag{17}$$

The relatively simple network shown in Figure 11 (made of passive components including one NTC resistor) can provide almost complete compensation for copper thermal variations.

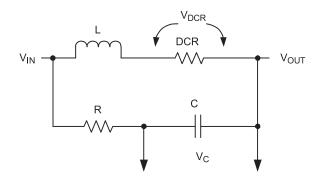


Figure 10.

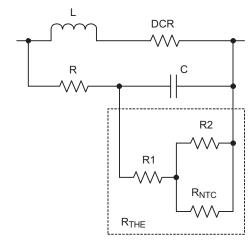


Figure 11.

Submit Documentation Feedback

The following algorithm and expressions help to determine components of the network.

1. Calculate the equivalent impedance of the network at 25°C that matches the inductor parameters in Equation 18. Use of COG type capacitors for this application is recommended. For example, for L = 0.4 μ H, DCR = 1.22 m Ω , C = 10 nF; R_E = 33.3 k Ω . It is recommended to keep R_E < 50 k Ω as higher values may produce false triggering of the current sense fault protection.

$$R_{E} = \frac{L}{C}$$
(18)

- 2. It is necessary to set the network attenuation value $K_{DIV}(25)$ at 25°C. For example, $K_{DIV}(25) = 0.85$. The attenuation values $K_{DIV}(25) > 0.9$ produces higher values for NTC resistors that are harder to get from suppliers. Attenuation values lower 0.7 substantially reduce the network output signal.
- 3. Based on calculated R_E and K_{DIV}(25) values, calculate and pick the closest standard value for the resistor R = R_E/K_{DIV}(25). For the given example R = 33 k Ω / 0.85 = 38.8 k Ω . The closest standard value from 1% line is R = 39.2 k Ω .
- 4. Pick two temperature values at which curve fitting is made. For example T1 = 50°C and T2 = 90°C.
- 5. Find the relative values of R_{THE} required on each of these temperatures.

$$R_{THE1} = \frac{R_{THE}(T1)}{R_{THE}(25)}$$
 $R_{THE2} = \frac{R_{THE}(T2)}{R_{THE}(25)}$ (19)

$$R_{T} = \frac{K_{DIV}(T)}{1 - K_{DIV}(T)} \times R \qquad K_{DIV}(T) = \frac{K_{DIV}(25)}{1 + 0.0039 \times (t - 25)}$$
(20)

For the given example R_{THE1}= 0.606, R_{THE2}=0.372.

- 6. From the NTC resistor datasheet get the relative resistance for resistors with desired curve. For the given example and curve 17 for NTHS NTC resistors from Vishay R_{NTC1} = 0.3507 and R_{NTC2} = 0.08652.
- 7. Calculate relative values for network resistors including the NTC resistor.

$$R1_{R} = \frac{\left(R_{NTC1} - R_{NTC2}\right) \times R_{E1} \times R_{E2} - R_{NTC1} \times R_{E2} \times \left(1 - R_{NTC2}\right) + R_{NTC2} \times R_{E1} \times \left(1 - R_{NTC1}\right)}{R_{NTC1} \times R_{E1} \times \left(1 - R_{NTC2}\right) - R_{NTC2} \times R_{E2} \times \left(1 - R_{NTC1}\right) - \left(R_{NTC1} - R_{NTC2}\right)}$$
(21)

$$R2_{R} = \left(1 - R_{NTC1}\right) \times \left[\frac{1}{1 - R1_{R}} - \frac{R_{NTC1}}{R_{E1} - R1_{R}}\right]^{-1}$$
(22)

$$RNTC_{R} = \left[\left(1 - R1_{R} \right)^{-1} - \left(R2_{R} \right)^{-1} \right]^{-1}$$
(23)

Copyright © 2008, Texas Instruments Incorporated

SLUS845-JUNE 2008 www.ti.com

For the given example R1_R= 0.281, R2_R = 2.079, and RNTC_R = 1.1.

- 8. Calculate the absolute value of the NTC resistor as $R_{THE}(25)$. In given example $R_{NTC} = 244.3 \text{ k}\Omega$.
- 9. Find a standard value for the NTC resistor with chosen curve type. In case the close value does not exist in a desired form factor or curve type. Chose a different type of the NTC resistor and repeat steps 6 to 9. In the example, the NTC resistor with the part number NTHS0402N17N2503J with $R_{NTCS}(25) = 250 \text{ k}\Omega$ is close enough to the calculated value.
- 10. Calculate a scaling factor for the chosen NTC resistor as a ratio between selected and calculated NTC value and. In the example k = 1.023.

$$k = \frac{RNTC_{S}}{RNTC_{C}}$$
(24)

11. Calculate values of the remaining network resistors.

$$R1_{C} = R_{THE}(25) \times \left[\left((1 - k) + k \times R1_{R} \right) \right]$$
(25)

For the given example, R1_C= $58.7~k\Omega$ and R2_C = $472.8~k\Omega$. Pick the closest available 1% standard values: R1 = $39.2~k\Omega$, and R2 = $475~k\Omega$, thus completing the design of the thermally compensated network for the DCR current sensor.

Figure 12 illustrates the fit of the designed network to the required function.

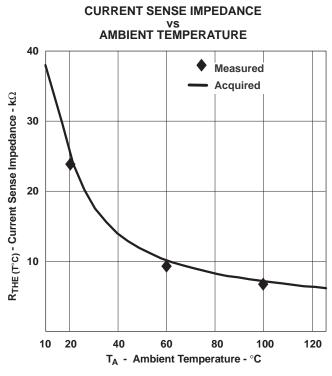


Figure 12.

Submit Documentation Feedback

Operation with Output Voltages Higher Than 3.3 V

The TPS40090 controllers are designed to operate in power supplies with output voltages ranging from 0.7 V to 3.3 V. To support higher output voltages, mainly in 12-V to 5-V power supplies, the BP5 voltage needs to be increased slightly to provide enough headroom to ensure linearity of current sense amplifiers. The simple circuit on Figure 13 shows a configuration that generates a 6-V voltage source to power the controller with increased bias voltage. Both the VIN and BP5 pins should be connected to this voltage source. The differential amplifier normally excessive for higher-output voltages can be disabled by connecting GNDS pin to the BP5 pin.

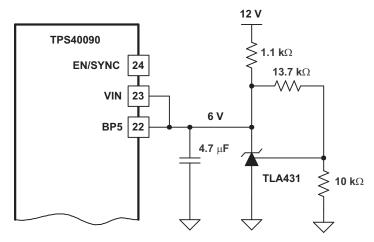


Figure 13. Biasing the TPS40090 with a 5-V Power Supply

DESIGN EXAMPLE

A design example is available. See the TPS40090EVM-001 user's guide (SLUU175).





ti.com 18-Sep-2008

PACKAGING INFORMATION

Orderable Device	Status ⁽¹⁾	Package Type	Package Drawing	Pins Pa	ackage Qty	Eco Plan ⁽²⁾	Lead/Ball Finish	MSL Peak Temp ⁽³⁾
TPS40090QPWRQ1	ACTIVE	TSSOP	PW	24	2000	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-1-260C-UNLIM

⁽¹⁾ The marketing status values are defined as follows:

ACTIVE: Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

OBSOLETE: TI has discontinued the production of the device.

(2) Eco Plan - The planned eco-friendly classification: Pb-Free (RoHS), Pb-Free (RoHS Exempt), or Green (RoHS & no Sb/Br) - please check http://www.ti.com/productcontent for the latest availability information and additional product content details.

TBD: The Pb-Free/Green conversion plan has not been defined.

Pb-Free (RoHS): TI's terms "Lead-Free" or "Pb-Free" mean semiconductor products that are compatible with the current RoHS requirements for all 6 substances, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, TI Pb-Free products are suitable for use in specified lead-free processes.

Pb-Free (RoHS Exempt): This component has a RoHS exemption for either 1) lead-based flip-chip solder bumps used between the die and package, or 2) lead-based die adhesive used between the die and leadframe. The component is otherwise considered Pb-Free (RoHS compatible) as defined above.

Green (RoHS & no Sb/Br): TI defines "Green" to mean Pb-Free (RoHS compatible), and free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material)

(3) MSL, Peak Temp. -- The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

OTHER QUALIFIED VERSIONS OF TPS40090-Q1:

• Catalog: TPS40090

NOTE: Qualified Version Definitions:

Catalog - TI's standard catalog product

PW (R-PDSO-G**)

14 PINS SHOWN

PLASTIC SMALL-OUTLINE PACKAGE



NOTES: A. All linear dimensions are in millimeters.

B. This drawing is subject to change without notice.

C. Body dimensions do not include mold flash or protrusion not to exceed 0,15.

D. Falls within JEDEC MO-153

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products Amplifiers amplifier.ti.com Data Converters dataconverter.ti.com DSP dsp.ti.com Clocks and Timers www.ti.com/clocks Interface interface.ti.com Logic logic.ti.com Power Mgmt power.ti.com Microcontrollers microcontroller.ti.com www.ti-rfid.com RF/IF and ZigBee® Solutions www.ti.com/lprf

Applications	
Audio	www.ti.com/audio
Automotive	www.ti.com/automotive
Broadband	www.ti.com/broadband
Digital Control	www.ti.com/digitalcontrol
Medical	www.ti.com/medical
Military	www.ti.com/military
Optical Networking	www.ti.com/opticalnetwork
Security	www.ti.com/security
Telephony	www.ti.com/telephony
Video & Imaging	www.ti.com/video
Wireless	www.ti.com/wireless

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2008, Texas Instruments Incorporated