



420 Series RS232 Encoder for Keypad Applications - Installation Instruction

Storm 420 Series Encoders allow interfacing between a Storm keypad and host system using the RS232 communications protocol. This model will also drive a 4 line x 20 character LCD display. For additional information download the 420 Encoder Application / Engineering Manual from www.storm-interface.com

SPECIFICATIONS

Input Power 5V dc \pm 0.25 V, regulated supply Overall Size W 89mm x L 66mm x H 32mm
 RS232 Output (via 6 pin Molex 2.54mm (.100") Pitch KK®) Mounting Centres at 73.5mm x 43.2mm

Drives Powertips 80 Character LCD Display (uses Hitachi HD44780U LCD-II Controller/Driver)

Direct connection for underpanel fixing 12, 16, 20 way Storm Keypads
 Ribbon Cable needed for top panel fixing 4, 12, 16 way Storm Keypads

Display Controls :

On host system : Ctrl + L - clears the display, Ctrl + C toggles cursor on and off

Keypad Connector (on reverse of pcb)		✓ = pin connection made										Direct connection to rear of keypad ?		
KEYPAD TYPE														
20 WAY BACKLIT	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	YES
20 WAY NOT BACKLIT	Fit polarising pin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	Fit polarising pin	YES
12 / 16 WAY BACKLIT	Fit polarising pin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	Fit polarising pins	YES—fit polarising pins to positions 1,12 and 13
12 / 16 WAY NOT BACKLIT	Fit polarising pins	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	Fit polarising pins	YES
4 WAY BACKLIT	Fit polarising pin	✓	Fit polarising pin	✓	✓	✓	✓	✓	✓	✓	✓	✓	Fit polarising pin	NO—separate cable required - See Note 1 below STD version needs 5 way cable BACKLIT version needs 7 way cable Fit polarising pins as required
4 WAY NOT BACKLIT	Fit polarising pins	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	Fit polarising pins	

Encoder Pin	1	2	3	4	5	6	7	8	9	10	11	12	13
R = ROW, C = COLUMN	LED CATHODE	TAMPER IN	R1	R2	C1	C2	C3	C4	R4	R3	R5 FUNCTION KEYS	TAMPER OUT	LED ANODE
	PIN 1 ON REVERSE												


NOTE 1—Connections for 4 way keypads

ENCODER PIN	TO	KEYPAD PIN	STD	BACKLIT
2			NC	1
11			1	2
5			5	6
6			4	5
7			3	4
8			2	3
13			NC	7

RS232 OUTPUT


DTR
GND
NC
RTS
RX
TX (Pin 1)

JUMPER SETTING CONTROLS BACKLIT KEYPAD LED COLOUR

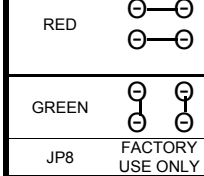

Input Power Terminals

LCD Display Contrast Adjustment

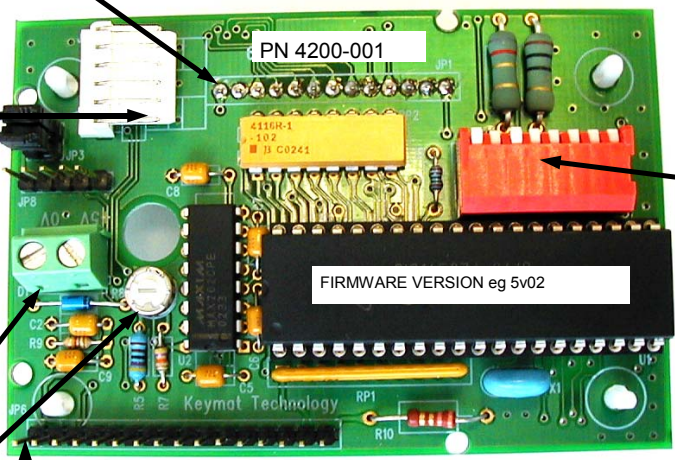

60 mm

88.9 mm

LCD Display Connector, 16 pins, 0.1" square pins

Pin	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Symbol	Vss	Vdd	Vo	RS	RW	E	DB0	DB1	DB2	DB3	DB4	DB5	DB6	DB7	A	K

Configuration Switches

ORDERING DETAILS

Stock No 4200-00[X] Item RS232 Encoder

[X] denotes packaging variant

free downloads from www.storm-interface.com :-

420 Encoder Application/Engineering Manual
Test Software

Mounting Details Page 1 of 4
420-XX-08KT Rev 2 Oct 2008



Whilst every effort is made to ensure details are correct at time of print, specifications are subject to change without notice.



FM39602



www.storm-interface.com

Storm is a trademark of Keymat Technology Ltd.


Fitted to 4, 12 or 16 WAY KEYPAD

Configuration Switch Settings	1	2	3	4	5	6	7	8	Installation Checklist
4 Way Keypads	ON	CHARACTER ECHOING SELECTOR ON = ECHO ON OFF = ECHO OFF	OFF	ON	ON	ON	OFF	BAUD RATE SELECTOR OFF=9600 BAUD ON=1200 BAUD	
12 and 16 Way Telephone Layout Keypads	ON		OFF	OFF	OFF	OFF	ON		
12 and 16 Way Calculator Layout Keypads	ON		OFF	ON	OFF	OFF	ON		

Installation Checklist
✓ Keypad
✓ Encoder, configuration switch set
✓ Panel Fixing prepared
✓ +5V regulated supply
✓ RS 232 cable with 6 way Molex socket
✓ Ribbon cable keypad to encoder if needed
✓ LCD and 16 way ribbon cable if needed
✓ Polarisng pins fitted to encoder


ROW / COLUMN DESIGNATIONS (KEYPADS FRONT VIEW)

For Example R1C2 = Row 1 Column 2. NB : A 20 way keypad is treated as 4 way + 16 way.

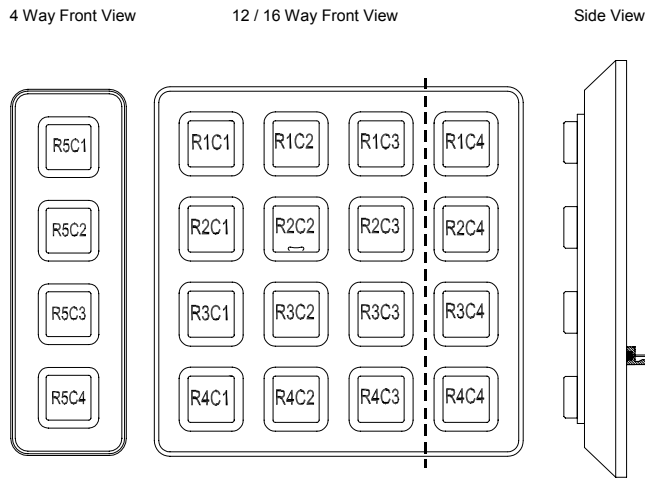

TYPICAL INSTALLATION

(rear view, encoder direct connection to keypad, LCD display used)

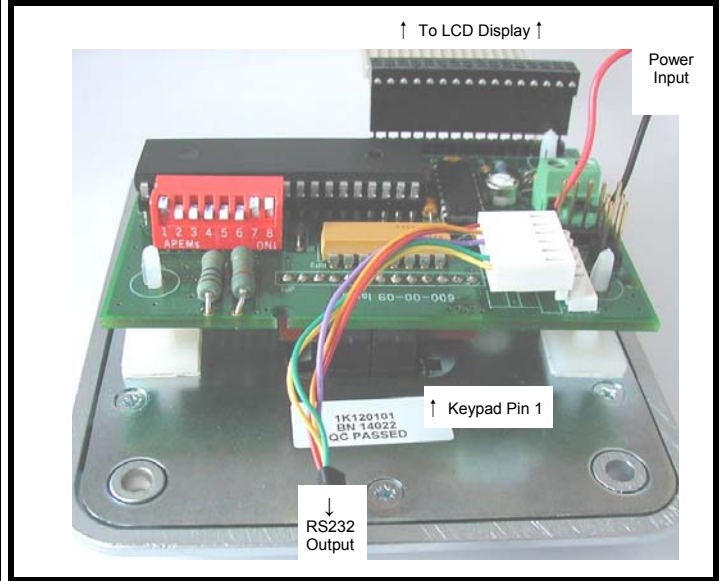

PIN-OUT FOR 4, 12 and 16 WAY MATRIX KEYPADS

4 WAY KEYPAD (NO BACKLIGHT)
CONTACT CONNECTIONS
(REAR VIEW)

PINS	• • • • •
PIN NUMBER	5 4 3 2 1

PIN	ROW / COLUMN
1	R5
2	C4
3	C3
4	C2
5	C1

4 WAY BACKLIT KEYPAD
CONTACT CONNECTIONS
(REAR VIEW)

PINS	• • • • • • •
PIN NUMBER	7 6 5 4 3 2 1

PIN	ROW / COLUMN
1	LED POWER
2	R5
3	C4
4	C3
5	C2
6	C1
7	LED POWER

12 / 16 WAY KEYPAD (NO BACKLIGHT)
CONTACT CONNECTIONS
(REAR VIEW)

PINS	• • • • • • • •
PIN NUMBER	8 7 6 5 4 3 2 1

PIN	ROW / COLUMN
1	R1
2	R2
3	C1
4	C2
5	C3
6	C4 (16 WAY ONLY)
7	R4
8	R3

12 / 16 WAY BACKLIT KEYPAD
CONTACT CONNECTIONS
(REAR VIEW)

PINS	• • • • • • • • • •
PIN NUMBER	10 9 8 7 6 5 4 3 2 1

PIN	ROW / COLUMN
1	LED POWER
2	R1
3	R2
4	C1
5	C2
6	C3
7	C4 (16 WAY ONLY)
8	R4
9	R3
10	LED POWER

ASCII CODE TABLES

4 WAY KEYPAD ASCII CODES

ROW / COLUMN	R5
C1	11
C2	12
C3	13
C4	14

NOTE 1 : These codes are non-printing ASCII device control codes. The application software will need to assign usage

NOTE 2 : The COMMON pin on a 4 way is termed ROW 5 to be consistent with applications using 4 function keys.

12 / 16 WAY TELEPHONE KEYPAD ASCII CODES

ROW / COLUMN	C1	C2	C3	C4
R1	31	32	33	61
R2	34	35	36	62
R3	37	38	39	63
R4	2A	30	23	2E

12 / 16 WAY CALCULATOR KEYPAD ASCII CODES

ROW / COLUMN	C1	C2	C3	C4
R1	37	38	39	1B
R2	34	35	36	0C*
R3	31	35	33	05
R4	7F	30	0D	2E

* = Form Feed Code to give CLEAR function


Fitted to INTEGRATED 20 WAY KEYPAD AND DISPLAY

Configuration Switch Settings	1	2	3	4	5	6	7	8	Installation Checklist
Integrated 20 Way Keypad and Display - Telephone Layout	OFF	CHARACTER ECHOING SELECTOR	ON	OFF	OFF	ON	OFF	BAUD RATE SELECTOR OFF=9600 BAUD ON=1200 BAUD	
Integrated 20 Way Keypad and Display - Calculator Layout	OFF		ON	ON	ON	ON	OFF		
Note : Remove Jumpers from JP3 and JP4 in this configuration.		ON = ECHO ON OFF = ECHO OFF							

- ✓ Integrated 20 way Keypad
- ✓ Encoder , configuration switch set
- ✓ LCD and 16 way ribbon cable if needed
- ✓ Panel Fixing prepared
- ✓ +5V regulated supply
- ✓ RS 232 cable with 6 way Molex KK socket
- ✓ 13 way ribbon cable keypad to encoder if needed
- ✓ Polarisng pins fitted to encoder

ROW / COLUMN DESIGNATIONS (KEYPAD FRONT VIEW)

For Example R1C2 = Row 1 Column 2. NB : A 20 way keypad is treated as 4 way + 16 way.

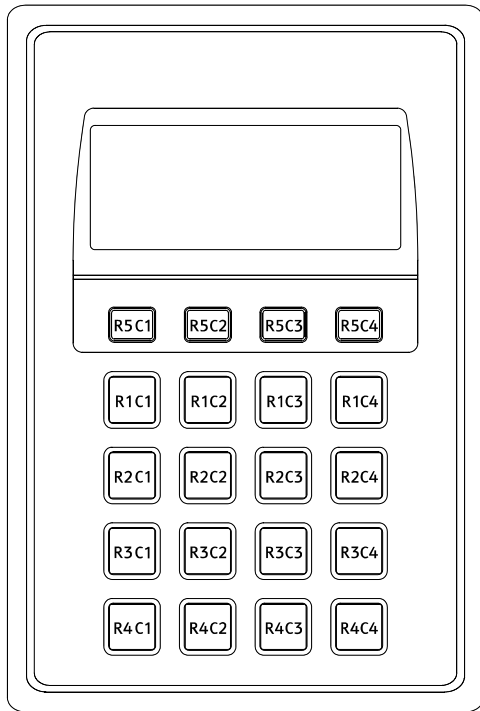


ASCII CODE TABLES

Row / Column	Telephone Layout		Calculator Layout	
	Character	ASCII	Character	ASCII
R5C1	▲	11	▲	11
R5C2	▲	12	▲	12
R5C3	▲	13	▲	13
R5C4	▲	14	▲	14
R1C1	1	31	1	31
R1C2	2 ABC	32	2	32
R1C3	3 DEF	33	3	33
R1C4	A	41	ENTER	1B
R2C1	4 GHI	34	4	34
R2C2	5 JKL	35	5	35
R2C3	6 MNO	36	6	36
R2C4	B	42	CLEAR	0C
R3C1	7 PQRS	37	7	37
R3C2	8 TUV	38	8	38
R3C3	9 WXYZ	39	9	39
R3C4	C	43	?	05
R4C1	* CLR	2A	*	7F
R4C2	0	30	0	30
R4C3	# ENT	23	#	0D
.	ENTER	2E	CANCEL	2E
ANTI-TAMPER OPEN CIRCUIT		07*		07*
* = CODE REPEATS EVERY 10 SECONDS WHILST CONDITION REMAINS ACTIVE				

PIN-OUT FOR 20 WAY KEYPAD

20 WAY KEYPAD
CONTACT CONNECTIONS
(REAR VIEW)

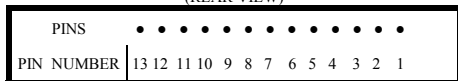

CONTACT MATRIX


PIN	ROW / COLUMN
1	NOT USED
2	TAMPER IN
3	R1
4	R2
5	C1
6	C2
7	C3
8	C4
9	R4
10	R3
11	R5
12	TAMPER OUT
13	NOT USED

Fitted to 6000 SERIES PINPAD

Configuration Switch Settings	R3	1	2	3	4	5	6	7	8	Installation Checklist
6000 Series Pinpad - Basic Layout	fitted	OFF	CHARACTER ECHOING SELECTOR ON = ECHO ON OFF = ECHO OFF	ON	OFF	ON	OFF	OFF	BAUD RATE SELECTOR OFF=9600 BAUD ON=1200 BAUD	
6000 Series Pinpad - UK Layout	Remove before use	OFF		ON	OFF	ON	OFF	OFF		
6000 Series Pinpad - USA Layout	Remove before use	OFF		ON	ON	ON	OFF	OFF		
Note : R3 may need to be removed depending on the configuration required.										

- Installation Checklist**
- ✓ Keypad
 - ✓ Encoder , configuration switch set
 - ✓ Panel Fixing prepared
 - ✓ +5V regulated supply
 - ✓ RS 232 cable with 6 way Molex KK socket
 - ✓ 13 way ribbon cable keypad to encoder if needed
 - ✓ Polarisng pins fitted to encoder


BASIC LAYOUT

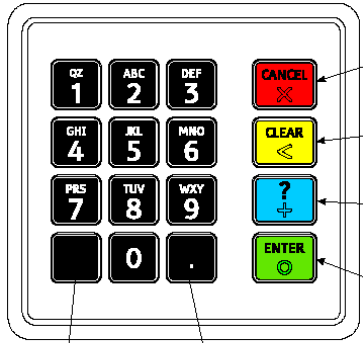


BLANK KEY
No Key Code with Standard Firmware

Key Code = Decimal Point


UK LAYOUT

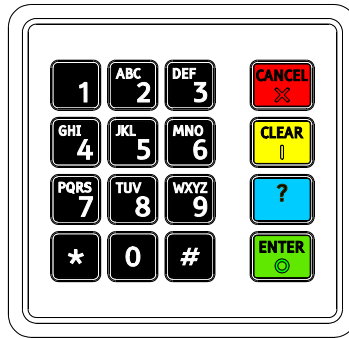

USA LAYOUT

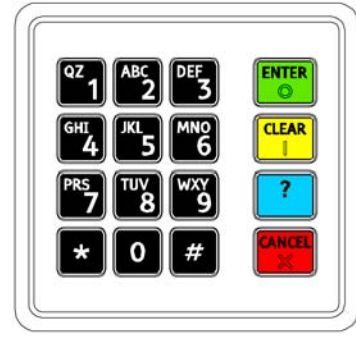

ROW / COLUMN DESIGNATIONS

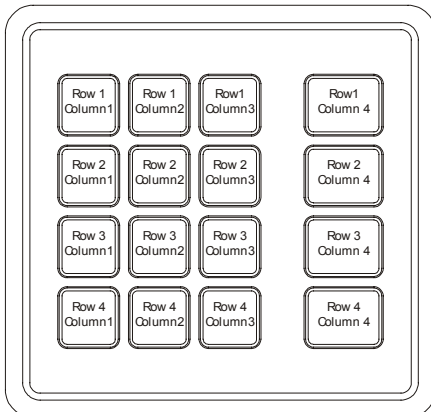


ASCII CODE TABLES

Row / Column	Basic Layout			UK Layout			USA Layout		
	Marking	Base Key	ASCII	Marking	Base Key	ASCII	Marking	Base Key	ASCII
R1C1	1 QZ	Black	31	1	Black	31	1 QZ	Black	31
R1C2	2 ABC	Black	32	2 ABC	Black	32	2 ABC	Black	32
R1C3	3 DEF	Black	33	3 DEF	Black	33	3 DEF	Black	33
R1C4	CANCEL	Red with raised Cross	0D	CANCEL	Red with raised Cross	0D	ENTER	Green with raised circle	1B
R2C1	4 GHI	Black	34	4 GHI	Black	34	4 GHI	Black	34
R2C2	5 JKL	Black with Homepip	35	5 JKL	Black with Homepip	35	5 JKL	Black with Homepip	35
R2C3	6 MNO	Black	36	6 MNO	Black	36	6 MNO	Black	36
R2C4	CLEAR	Yellow with raised vertical line	7F	CLEAR	Yellow with raised vertical line	7F	CLEAR	Yellow with raised vertical line	7F
R3C1	7 PRS	Black	37	7 PQRS	Black	37	7 PRS	Black	37
R3C2	8 TUV	Black	38	8 TUV	Black	38	8 TUV	Black	38
R3C3	9 WXY	Black	39	9 WXYZ	Black	39	9 WXY	Black	39
R3C4	?	Blue with raised Plus	05	?	Blue	05	?	Blue	05
R4C1		Black	No Code	*	Black	2A	*	Black	2A
R4C2	0	Black	30	0	Black	30	0	Black	30
R4C3	.	Black	2E	#	Black	23	#	Black	23
R4C4	ENTER	Green with raised circle	1B	ENTER	Green with raised circle	1B	CANCEL	Red with raised Cross	0D
ANTI-TAMPER OPEN CIRCUIT			07*			07*			07*

*= CODE REPEATS EVERY 10 SECONDS WHILST CONDITION REMAINS ACTIVE.
TO RESET—DISCONNECT POWER FOR 30 SECONDS.

PIN-OUT FOR 16 WAY MATRIX PINPAD

CONTACT CONNECTIONS (REAR VIEW)

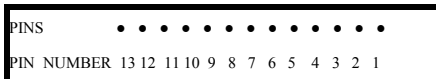

CONTACT MATRIX

PIN	ROW / COLUMN
1	NOT USED
2	TAMPER
3	R1
4	R2
5	C1
6	C2
7	C3
8	C4
9	R4
10	R3
11	NC
12	TAMPER
13	NOT USED