


Hand Crimp Tool Specification Sheet Order No. 63811-6000

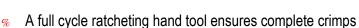


- % Ergonomically designed soft handles
- % Precisely designed crimping profiles with simple contact positioning
- % Easy handling due to outstanding force ratio

SCOPE

<u>Products:</u> 1.50mm (.591") Pitch, MX150[™] Receptacle Female Crimp Terminals, 18-22 AWG.

Terminal Series No.	Terminal	Wire Size		Insulation	Diameter	Strip Length			
reminal Selles NO.	•R	AWG	mm²	mm	ln.	mm	ln.		
	33001-2004	33001-3004	18	0.83	1.91-2.06	.075081	4.70-5.60	.185220	
33001	33001-2004		20	0.58	1.70-1.85	.067073	4.70-5.60	.185220	
	33001-2005	33001-3005	22	0.36	1.50-1.65	.059065	4.70-5.60	.185220	
33012	33012-2002	33012-3002	18	0.83	1.91-2.06	.075081	4.70-5.60	.185220	
			20	0.58	1.70-1.85	.067073	4.70-5.60	.185220	
	33012-2003	33012-3003	22	0.36	1.50-1.65	.059065	4.70-5.60	.185220	
	34750-0002	34750-1002	18	0.83	1.91-2.06	.075081	4.70-5.60	.185220	
34750			20	0.58	1.70-1.85	.067073	4.70-5.60	.185220	
	34750-0003	34750-1003	22	0.36	1.50-1.65	.059065	4.70-5.60	.185220	
 Cust 	omer to cut off	f terminal from	reel: 0.	50mm	(.020") max	imum Cut-c	off Tab.		
Terminals were validated per USCAR-21 using the following wire specifications:									
M1L-123A (TXL), M1L-135A1 (UTX), and M1L-126A1 (metric-TXL).									
Customers are required to complete validation testing if tooling purchased outside Molex Inc.									
and/or wire specifications are different than above.									

DEFINITION OF TERMS

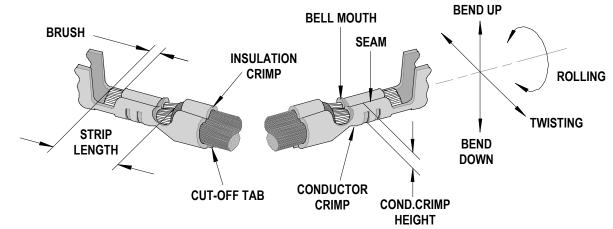

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Release Date: 03-21-06 Revision Date: 09-17-08 **UNCONTROLLED COPY**

TYPE 4A

CRIMP SPECIFICATION

Terminal Series No.	Bell n	nouth	 Conductor Brush 				
Terminal Series NO.	mm	ln.	mm	In.			
33001	0.25-1.25	.010049	0.15-0.40	.006016			
33012	0.25-1.25	.010049	0.15-0.40	.006016			
34750 0.25-1.25 .010049 0.15-0.40 .006016							
Wire brush to be below top of conductor crimp.							

Termi Series		Twist Roll	Seam
Ochico	Degree	Degree	Seam shall not be
3300	Crimped terminals and up to 5mm of wi	ro past the insulator	open and no wire allowed
3301	cutoff tab must freely fit in the Checking Ai		out of the crimping area
3475		u, rait No. 03000-2000	

≭Order Separately

After crimping, the crimp profiles should measure the following:

	Wire Size		Conductor				Profile		3
Terminal Series No.			Crimp Height		Crimp Width		AWG		
	AWG	mm ²	mm	ln.	mm	ln.	18	20	22
33001	18	0.83	1.20-1.30	.047051	2.05-2.25	.081089	Х		
	20	0.58	1.10-1.20	.043047	2.05-2.25	.081089		Х	
	22	0.36	0.95-1.05	.037041	1.50-1.70	.059067			Х
33012	18	0.83	1.20-1.30	.047051	2.05-2.25	.081089	Х		
	20	0.58	1.10-1.20	.043047	2.05-2.25	.081089		Х	
	22	0.36	0.95-1.05	.037041	1.50-1.70	.059067			Х
34750	18	0.83	1.20-1.30	.047051	2.05-2.25	.081089	Х		
	20	0.58	1.10-1.20	.043047	2.05-2.25	.081089		Х	
	22	0.36	0.95-1.05	.037041	1.50-1.70	.059067			Х

	Wire Size		Insulation					Force
Terminal Series No.			Crimp Height		Crimp Width		Minimum	
	AWG	mm ²	mm	ln.	mm	In.	Ν	Lb.
	18	0.83	1.90-2.10	.075083	2.20-2.40	.086094	89.9	20.2
33001	20	0.58	1.80-2.00	.071079	2.00-2.20	.079087	75.6	17.0
	22	0.36	1.75-1.95	.069077	1.80-2.00	.071079	49.8	11.2
	18	0.83	1.90-2.10	.075083	2.20-2.40	.086094	89.9	20.2
33012	20	0.58	1.80-2.00	.071079	2.00-2.20	.079087	75.6	17.0
	22	0.36	1.75-1.95	.069077	1.80-2.00	.071079	49.8	11.2
34750	18	0.83	1.90-2.10	.075083	2.20-2.40	.086094	89.9	20.2
	20	0.58	1.80-2.00	.071079	2.00-2.20	.079087	75.6	17.0
	22	0.36	1.75-1.95	.069077	1.80-2.00	.071079	49.8	11.2

T Tool Qualification Notes:


- 1. Pull Force should be measured with no influence from the insulation crimp.
- 2. The above specifications are guidelines to an optimum crimp.

OPERATION

Open the tool by squeezing the handles together, at the end of the closing stroke, the ratchet mechanism will release the handles, and the hand tool will spring open.

Crimping Terminals

- 1. Lift the wire stop blade up.
- 2. Insert the terminal fully into the correct die profile and the locator slot until the terminal is fully seated and stops.
- 3. Push down the wire stop blade. Make sure the wire stop blade is fully seated on the terminal behind the conductor grip section.

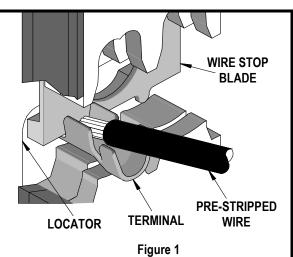

- 4. Slide the pre-stripped wire into the terminal; make sure to aim the wire end towards the tip point on the wire stop blade. See Figure 1. Align the wire so that it is parallel to, and sitting into the terminal. Maintain a light and constant pressure on the wire that is seated in the terminal at all times. (Do not let go of the wire.) Be sure to hold the wire and terminal in place until the terminal is fully crimped. See Figure 2.
- 5. Close the tool until the ratchet releases.
- 6. Carefully remove the crimped terminal.


Note: To maintain good brush control and a consistent bell mouth the crimping instructions must be followed.

Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

- 1. Remove dust, moisture, and other contaminants with a clean brush, or soft, lint free cloth.
- 2. Do not use any abrasive materials that could damage the tool.
- 3. Make certain all pins; pivot points and bearing surfaces are protected with a thin coat of high quality machine oil. Do not oil excessively.
- 4. When tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping dies, and store the tool in a clean, dry area.

Miscrimps or Jams (See Figure 3)

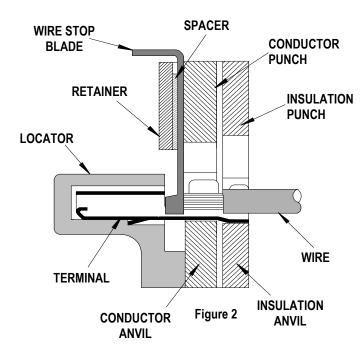

Should this tool ever become stuck or jammed in a partially closed position, **Do Not** force the handles open or closed. The tool will open easily by pushing the ratchet release lever.

Release Date: 03-21-06 Revision Date: 09-17-08 **UNCONTROLLED COPY**

Warranty

This tool is for electrical terminal crimping purposes only. This tool is made of the best quality materials. All vital components are long life tested. All tools are warranted to be free of manufacturing defects for a period of **30 days.** Should such a defect occur, we would exchange the tool free of charge. This will not be applicable to altered, misused, or damaged tools. This tool is designed for hand use only. Any clamping, fixturing, or use of handle extensions voids this warranty.

Hand held crimping tools are intended for low volume, prototyping, or repair requirements only.

CAUTION: Repetitive use of this tool should be avoided.


Notes:

- 1. This tool should only be used for the terminals and wire gauges specified on this sheet.
- 2. This tool is not adjustable. Variations in tools, terminals, wire stranding and insulation types may affect crimp height.
- 3. This tool is intended for standard conductor sizes. It may not give a good insulation crimp support for all insulation sizes.
- 4. Molex does not repair hand tools (see warranty above) The replacement parts listed are the only parts available for repair. If the handles or crimp tooling is damaged or worn, a new tool must be purchased.
- 5. Pull force should be used as the final criteria for an acceptable crimp. Pull force is measured with no influence from the insulation crimp. The insulation should be stripped long (1/2 in.) so the insulation grips on the terminal do not grip the wire insulation or the conductor. Refer to Molex Quality Crimping Handbook 63800-0029 for additional information on crimping and crimp testing.
- 6. Molex does not certify crimp hand tools.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

PARTS LIST

Item Number	Order Number	Description	Quantity
1	63600-0520	Crimping Spring	2
2	63811-6075	Locator	1
3	63600-0525	Handle Spring	1

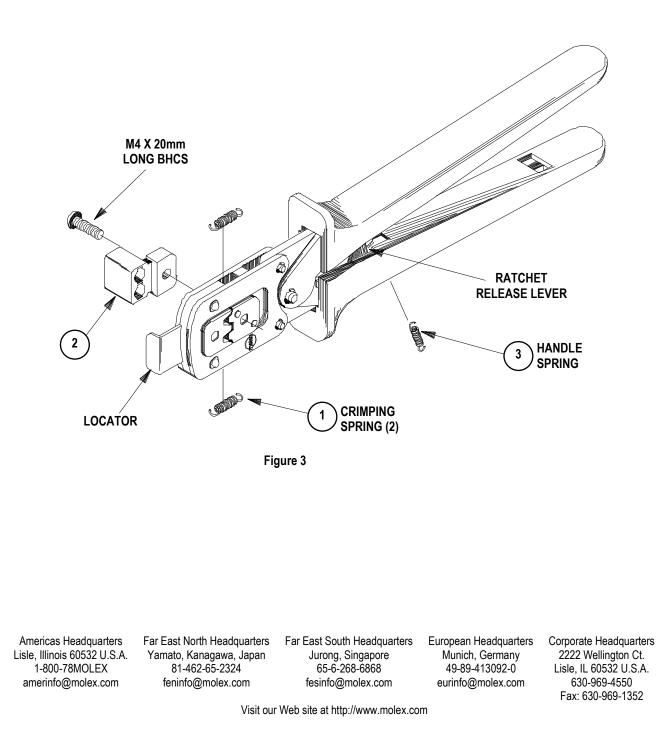

Doc No: ATS-638116000 Revision: D

Release Date: 03-21-06 Revision Date: 09-17-08

UNCONTROLLED COPY

Page 5 of 5